

Das mitgelieferte Befestigungsmaterial (Dübel und Schrauben) ist ausschließlich für die Befestigung von Bauteilen an Beton und/oder festem Mauerwerk geeignet. Bei abweichender Wandbeschaffenheit ist eine andere Befestigung bauseits vorzunehmen. Beleuchtungen in frei hängenden Möbeln erfordern Kabelkanallösungen auf oder unter Putz.

Die genaue Position des Artikels an der Zimmerwand festlegen!

1. Bohrmaße für Montageplatten (Abb. 1) an Zimmerwand übertragen.
Ø8 mm Löcher in das Mauerwerk bohren und Dübel Ø8 x 51 mm (Teil-Nr. 50802) einsetzen.
Montageplatte (Teil-Nr. 50427) mit 3 x Schraube Ø5 x 50 mm (Teil-Nr. 00055) anschrauben.
Achtung: Montageplatte linke und rechte Ausführung!

Abb.: Beispiel Modell F017L


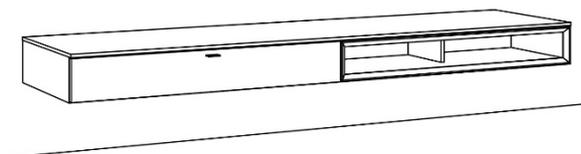


Abb. 1

Bohrmaße von Korpus-Außenkante für Montageplatten

Bohrmaß von
Korpus-Oberkante
für Montageplatte
+13 mm bzw. 39 mm
Deckblattstärke
(Abb. Stärke 13 mm)

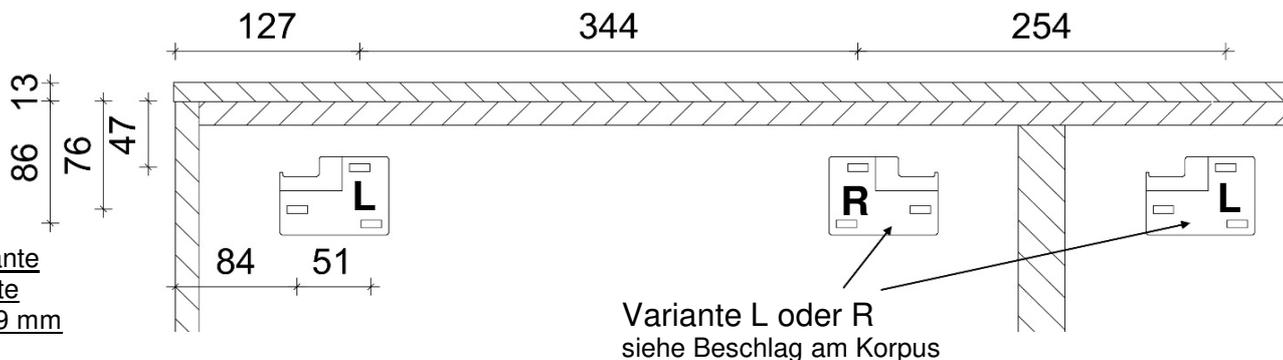

2. Zusatzartikel Beleuchtung: => Siehe Anschlussplan Beleuchtung

3. Bei Artikeln mit vormontiertem Deckblatt muss dieses für die weitere Montage abgeschraubt werden.

4. Soweit für Montage erforderlich: Frontteile ausbauen. Ein offenes Fach ist als kompletter Artikel eingebaut und rückseitig mit dem Möbel verschraubt. =>Schrauben lösen, den Einsatz nach vorne aus dem Korpus ziehen. Beim Einsatz mit Beleuchtung (Zubehör) ist auf das Anschlusskabel rückseitig des Möbels zu achten!

5. Im Korpus alle Stellschrauben am Hängebeschlag öffnen (Abb. 2-4).

6. Korpus in die Montageplatten einhängen.

7. Ausrichtung mit Wasserwaage (Abb.5). Eine horizontale Korrektur ist mit der Höhen-Stellschraube (Abb. 2) am Hängebeschlag vorzunehmen.

Abb. 5

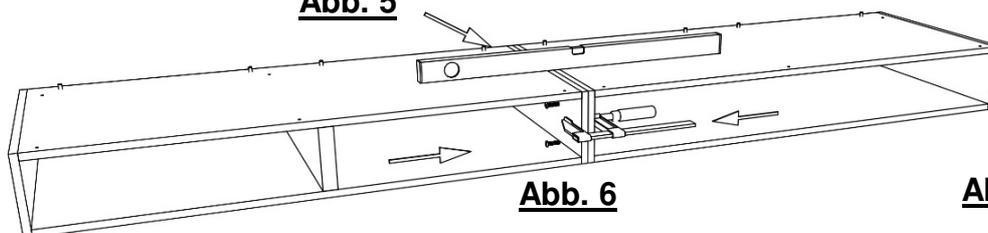


Abb. 6

Abb. 2




Höhenverstellung



Achtung:
Akkuschrauber

8. Soweit für Montage erforderlich: Verbindung Korpusseiten (Abb. 6), zwei Ausführungen möglich
Ausführung 1: Mit Tellerkopfschraube 4 x 30 mm (Teile Nr.: 51458), bei einseitiger Befestigung (Offenes Fach).
Ausführung 2: Mit Möbelschraube M4 x 10 mm (Teile Nr.: 51203) und Gewindeendhülse M4 5 x 27 mm (Teile Nr.: 51290), für durchgehende Bohrungen.


9. Mit der Tiefen-Stellschraube (Abb. 3), am Hängebeschlag den Abstand zur Zimmerwand (1) bzw. die vertikale Neigung (2) einstellen.

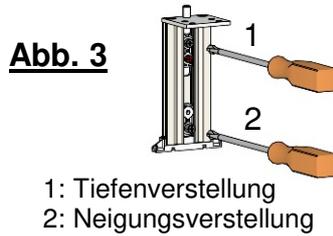

10. Aushängesicherung (Abb. 4), am Hängebeschlag im Korpus wieder schließen. Drehen bis die rote Schraube die Montageplatte berührt!



11. Deckblatt (Stärke 13 mm, Lack) von innen mit Möbelschraube M4 x 20 mm (Teile Nr.: 51254) festschrauben.
Im Bereich des offenen Faches Senkschraube M4 x 20 mm (Teile Nr.: 51248) verwenden.
Deckblatt (Stärke 39 mm, Baumkante) von innen mit Tellerkopfschraube 4 x 30 mm (Teile Nr.: 51458) festschrauben.

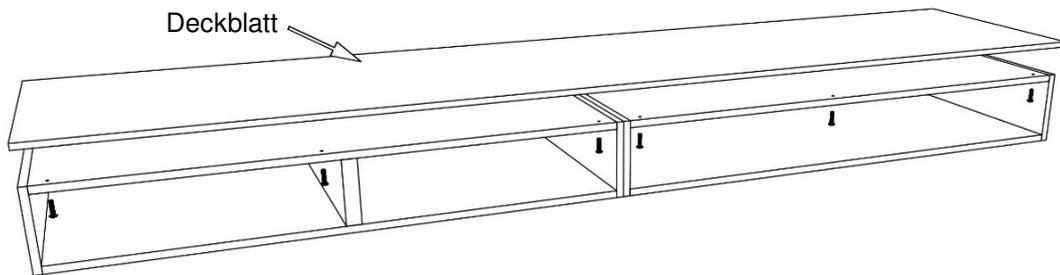

12. Frontteile wieder einbauen und ggf. ausrichten.

13. Griffe (Teile Nr. 51122) mit Griffschrauben M4 x 23 mm (Teile Nr. 51251) anbringen.

Achtung: Alle Beschläge aus Gründen der Tragfähigkeit gleichmäßig ausrichten und belasten!

The provided fittings (dowels and screws) are only suitable for fixing components to concrete and/or solid masonry. If the consistency of the wall is different, you must use suitable fittings that can hold the load.

Determine the exact position of the shelf on the room wall!

1. Transfer drilling dimensions for mounting plates (Fig. 1) to the wall.

Drill Ø8 mm holes in the masonry and insert Ø8 x 51 mm dowels (part no. 50802).

Screw on the mounting plate (part no. 50427) with 3 x Ø5 x 50 mm screws (part no. 00055).

Attention: Mounting plate left and right version!

Fig.: Example model F017L





Fig. 1

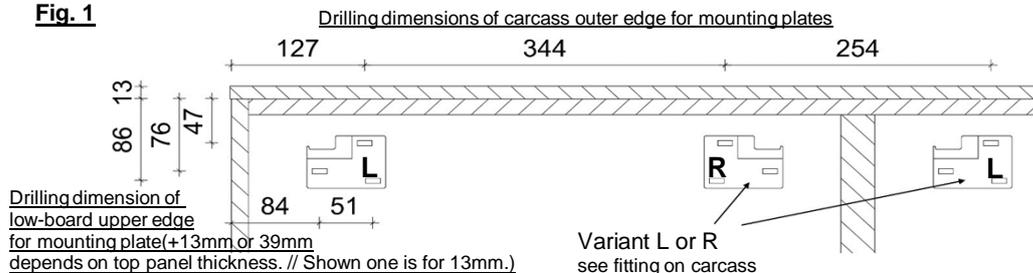

2. Additional item - lighting: => See wiring diagram for lighting


3. For articles with a pre-assembled cover sheet, this must be unscrewed for further assembly.

4. If necessary for assembly: remove the front parts. An open compartment is fitted as a complete item and screwed to the back of the furniture. => Loosen the screws and pull the insert forwards out of the carcass. When using an insert with lighting (accessory), pay attention to the connection cable at the back of the furniture!

5. In the carcass, open all the adjustment screws on the wall bracket (Fig. 2-4).

6. Hook the carcass into the mounting plates.

7. Align with a spirit level (Fig. 5). A horizontal correction is to be made with the height-adjusting screw (Fig. 2) on the wall bracket.

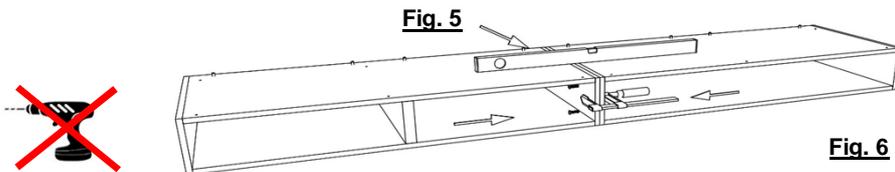


Attention:
 Cordless screwdriver




8. If necessary for assembly: connection of carcass sides (Fig. 6), two versions possible

Version 1: With 4 x 30 mm flat head screw (part no.: 51458), if only one side is pre-drilled. Version 2: With M4 x 10 mm furniture screw (part no.: 51203) and threaded end sleeve M4 5 x 27 mm (part no.: 51290) if both sides are pre-drilled, or drill through pre-drilled holes with Ø 5 mm drill.


9. Adjust the distance to the wall (1) or the vertical inclination (2) with the depth adjustment screw (Fig. 3) on the wall bracket.

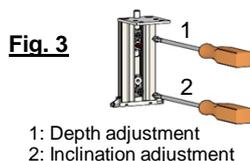

10. Close the safety catch (Fig. 4) on the wall bracket in the carcass. Turn until the red screw touches the mounting plate!

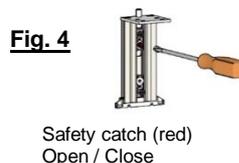

11. (13mm top panel): Screw the cover sheet from the inside with a M4 x 20 mm furniture screw (part no.: 51254). In the area of the open compartment, use a M4 x 20 mm countersunk screw (part no.: 51248). (39mm top panel): Screw from inside with 4 x 30mm (part no.: 51458)

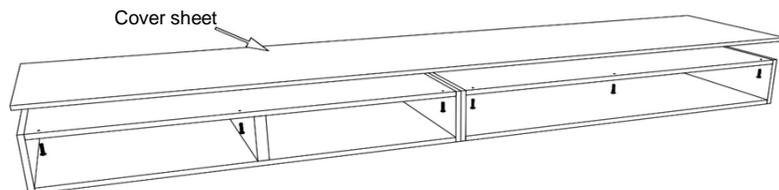

12. Refit the front parts and align if necessary.

13. Fit handles (part no. 51122), 4 x 23 mm Euro screw (part no. 51251).

Attention: For reasons of load capacity, align and load all fittings evenly!