

Aufbauanleitung "ANDRA": Standelemente mit SockelfüÙe




Das mitgelieferte Befestigungsmaterial (Dübel und Schrauben) ist ausschließlich für die Befestigung von Bauteilen an Beton und/oder festem Mauerwerk geeignet. Bitte beachten Sie auch bei den Wandmontageelementen die max. Belastungswerte. Die Wandbeschaffenheit ist idealerweise bei Auftrags- erfassung zu erfragen und spätestens vor der Montage unbedingt von fachkundigem Personal zu prüfen. Bei abweichender Beschaffenheit (z. B. Leichtbauwänden) ist eine andere, der Belastung angemessene Befestigung bauseits vorzunehmen. Klären Sie elektrische Vorleistungen für Anschluss- und Gerätetechnik. Frei hängende Beleuchtungen erfordern Kabelkanallösungen auf oder unter Putz.


Diese Aufbauanleitung ist gültig für folgende Bestell-Nummern:

Lowboard: S700, S701, S702, S703, S715, S704, S705, S706, S707, S719, S708, S709, S710, S711, S712, S713, S714, S715, S716, S717, S725 | Sideboard: S730, S732, S733, S736, S737, S747, S740, S741, S742, S743, S746, S748, S749, S762 | Highboard: S750, S751, S752, S753, S754, S755, S756, S757, S758, S759, S767, S768, S769, S772 | Vitrine: S773, S764, S766, S760, S761, S775, S776, S777, S778


Maximale Belastbarkeit: Einlegeboden: 15kg | Schubkasten: 5kg

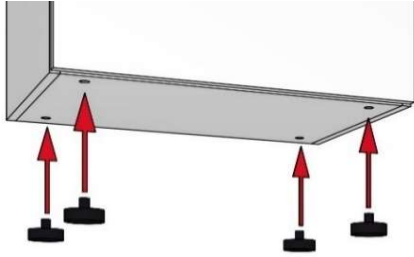

1. Transportschutz unterhalb des Sockelbodens abschrauben und entsorgen. StellfüÙe / Möbelgleiter (Teile-Nr. 50611) mit dem Zapfen in den Sockelboden setzen. Alle Excenter auf festen Sitz prüfen und das Kastenmöbel auf einem festen und ebenen Untergrund platzieren.

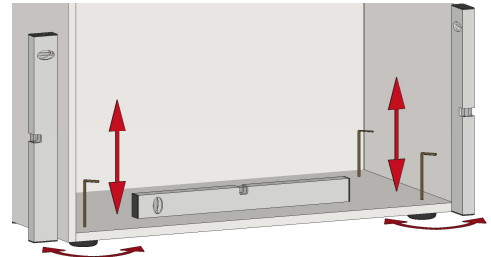


2. Ggf. Frontteile (Schubkästen, Klappen, Türen) ausbauen. Möbelgleiter durch Drehen im Uhrzeigersinn auf den Nullpunkt stellen, horizontal und vertikal ausrichten. Korrekturen von innen mittels Inbusschlüssel SW4 oder von außen mit Hand vornehmen. Löcher mit Abdeckkappen $\varnothing 10\text{mm}$ (Teile-Nr. 50422-01-75) schließen (Ausnahme: Modell S764 & S766 ohne durchgehende Bohrung für StellfüÙe).

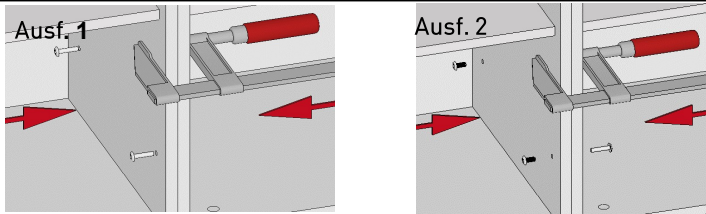


Korpusverbindung so wählen, dass keine Schraubenköpfe in offenen Fächern sichtbar sind!

3. Verbindung Korpusseiten (zwei Ausführungen möglich!):
Ausführung 1 (linke Darstellung): Mit Tellerkopfschraube 4x30mm (Teile-Nr. 51458), wenn nur einseitig vorgebohrt ist.
Ausführung 2 (rechte Darstellung): Mit Möbelschraube M4x10mm (Teile-Nr. 51203) und Gewindeendhülse M4x27mm (Teile-Nr. 51290), wenn beide Seiten durchgebohrt sind, bzw. vorgebohrte Löcher mit $\varnothing 5\text{mm}$ Bohrer durchbohren (gegen Ausriss Holzstück o. Ä. gegenlegen).

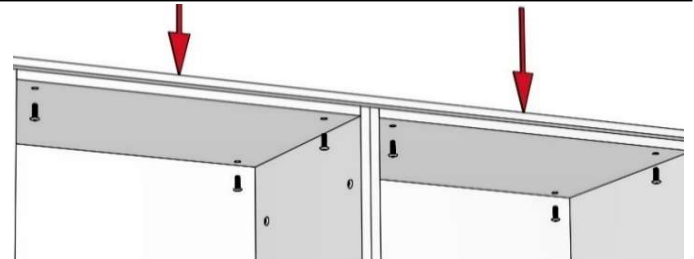


4. Deckblattmontage (sofern nicht vormontiert): Deckblatt von innen mit Möbelschraube M4x20mm (Teile-Nr. 51248) festschrauben.

5. Zusatzartikel Beleuchtung: → siehe Aufbauanleitung "Anschlussplan Beleuchtung"

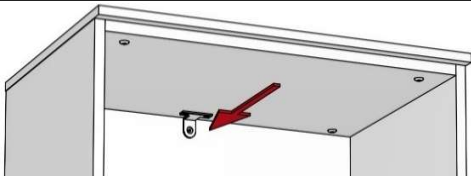

Variante 6.A

Bei Nichtverwendung der Kippsicherung gemäß Montageanleitung droht ein unbeabsichtigtes Umkippen der Möbel!

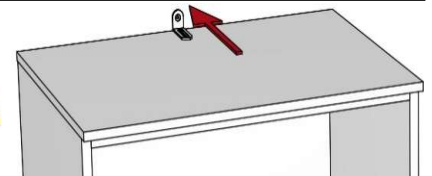

Variante 6.B

oder
(Lowboards ohne Kippsicherung)

6.A Kippsicherung innen, Möbelhöhe ca. 89-140cm: Mit kleinem Bohrer durch vormontierten Winkel und Rückwand bohren (Bohrposition an Mauerwerk markieren). $\varnothing 8\text{mm}$ Bohrung in Mauerwerk bohren. Dübel 8x51mm (Teile-Nr. 50802) verankern. Mit Spanplattenschraube 5x70mm (Teile-Nr. 00210) befestigen.

6.B Kippsicherung außen, nur bei Möbelhöhe ca. 208cm: Set "Wandbestigung" (Teile-Nr. 50570) verwenden. Anbringung oben auf dem Deckblatt.

7. Griffe (Teile-Nr. S827-08-9) mit Griffschrauben M4x22mm (Teile-Nr. 51268) anbringen.

Fronten einsetzen, Zierkappen (Teile-Nr. 50618) auf Türscharniere klipsen und Abdeckkappen (50430-01-75) auf Excentergehäuse setzen.

Assembly instructions "ANDRA":

Cabinet with feet




The fixture materials provided with this product (dowels and screws) are only suitable for fixing parts to concrete and/or solid masonry. Please observe the maximum load that the wall-mounted elements can carry. Ideally, the suitability of the wall should be enquired about when the order is made and must be checked by specialist staff before the cabinet is assembled at the latest. If the condition of the wall is not suitable (e.g. if it is a lightweight partition wall), then another type of fixture suitable for the load that is to be carried should be used. Check the electrical input of any connection or device technology. Free-hanging light fixtures require cable duct solutions that are either on or under plaster.


These assembly instructions are valid for the following order no.:

Lowboard: S700, S701, S702, S703, S715, S704, S705, S706, S707, S719, S708, S709, S710, S711, S712, S713, S714, S715, S716, S717, S725 | Sideboard: S730, S732, S733, S736, S737, S747, S740, S741, S742, S743, S746, S748, S749, S762 | Highboard: S750, S751, S752, S753, S754, S755, S756, S757, S758, S759, S767, S768, S769, S772 | Cabinet: S773, S764, S766, S760, S761, S775, S776, S777, S778



Maximum load-bearing capacity: wood shelf: 15kg | drawer: 5kg

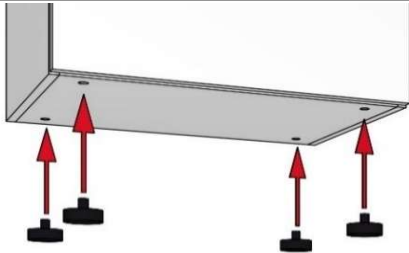

1. Unscrew the transport protection from beneath the base. Place the adjustable feet / furniture gliders (part no. 50611) with the dowels in the base. Check that all the accessories are firmly seated and place the cabinet onto a stable and level floor.

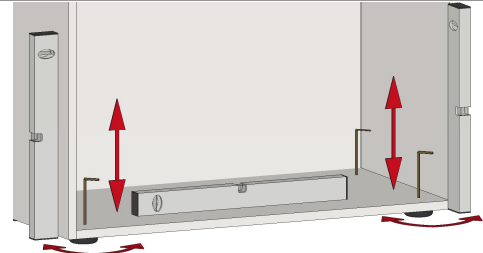


2. Remove front parts (e.g. drawers, doors). Set the furniture gliders to the zero point by turning them in a clockwise direction and then adjust them vertically and horizontally. Make any other adjustments from the inside with an Allen key or from the outside by hand. Cover any holes for the feet with the cover caps $\varnothing 10\text{mm}$ (part no. 50422-01-75, exception: Model S764 & S766 without through-hole for adjustable feet).

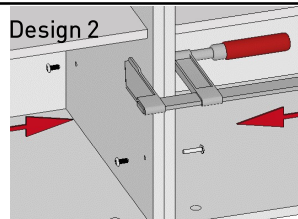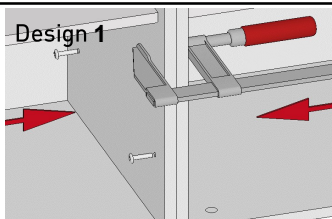


Select the carcass connection so that no screw heads are visible in open compartments after assembly is finished.

3. Connection of carcass sides (two designs possible!):
Design 1 (left picture): If predrilled from one side / not predrilled use wafer head screws 4x30mm (part no. 51458).
Design 2 (right picture): Fix the side panels with furniture screws M4x10mm (part no. 51203) and thread end sleeves M4x27mm part no. 51290, if both side panels are predrilled or drill through predrilled holes with a $\varnothing 5\text{mm}$ drill bit (place a piece of wood or similar against tear-outs).

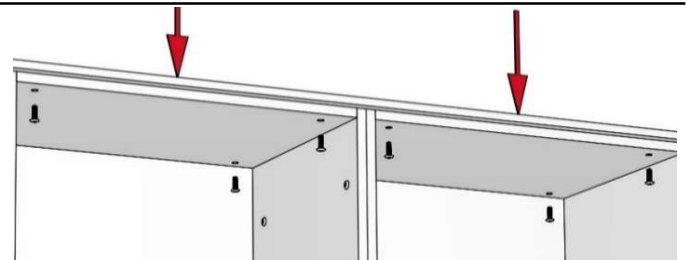


4. Top panel assembly (if not pre-assembled):
Screw the top panel from the inside with furniture screws M4x20mm (part-no. 51248)

5. Additional item lightning → See assembly instruction "Wiring diagram"

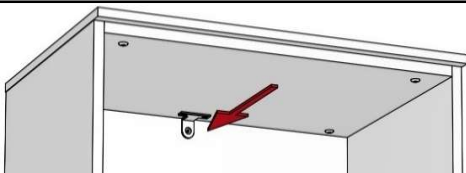

Design 6.A

Failure to use the anti-tip device in accordance with the assembly instructions may result in the furniture inadvertently tipping over!

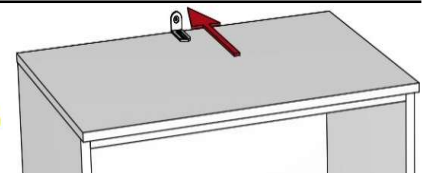

Design 6.B

or
(Lowboards with no anti-tip protection)

- 6.A Inner anti-tip protection, furniture height 89-140cm
Drill through pre-assembled bracket and back panel with small drill bit (mark the drilling position on the masonry). Drill $\varnothing 8\text{mm}$ holes in the masonry. Anchor 8x51 mm dowels (part no. 50802). Fasten into place with 5x70 mm chipboard screws (00210).

- 6.B Outer anti-tip protection, only furniture height 208cm
Use "Wall fastening" set (part no. 50570). Affix to the top of the overlay.

7. Attach handles (part-no. S827-08-9) with screws M4x22mm (part-no. 51268). Reattach the fronts, clip the decorative caps (part no. 50618) onto the door hinges and place cover caps on eccentrics (part no. 50430-01-75).