

# Aufbauanleitung "ANDRA": Untergestell für Standelemente (Lack & Metall) S780



Abb. 1: Verbindung Metalluntergestell


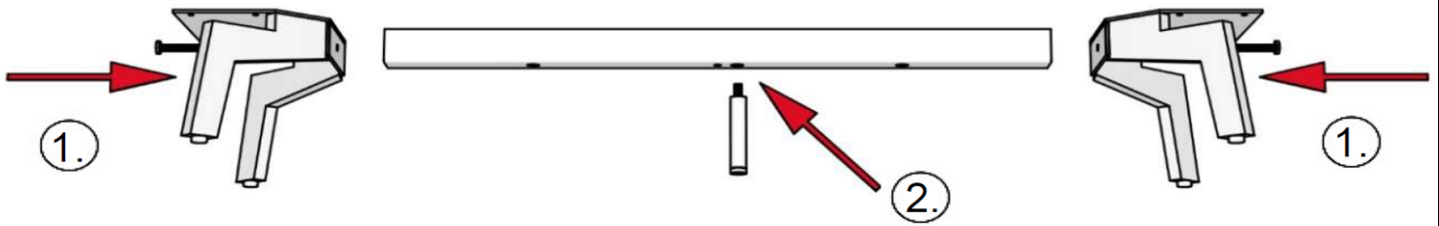



Abb. 2: Stabilisierung Lackuntergestell

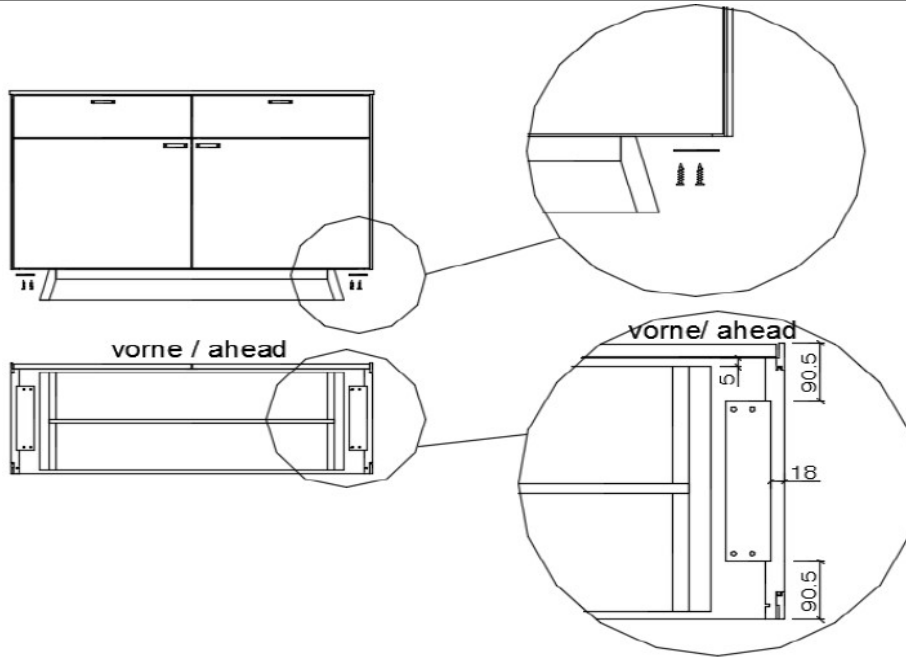


1. Verbindung Metalluntergestell (siehe Abb.1): Seitenteile mit Stahlzarge verbinden. Dazu Schraube M6 x 20 mm (Teile Nr. 51245) mittels Inbusschlüssel SW4 (Teile Nr.50810) einschrauben (Abb. 1 Schritt 1).

2. Nur Lackuntergestell: Zur Stabilisierung der Korpusaußenseiten zusätzliche Sockelbleche 250x60x2mm (Teile-Nr. 50637) mit Euroschrauben 6,3x13mm (Teile-Nr. 51215) unter Sockelboden und Außenseite schrauben (siehe Abb. 2).

3. Nur Metalluntergestell: Zusätzlicher Stellfuß (ab Möbelbreite 120 cm) mittig unter der Stahlzarge in das Gewinde drehen (Abb. 1 Schritt 2).

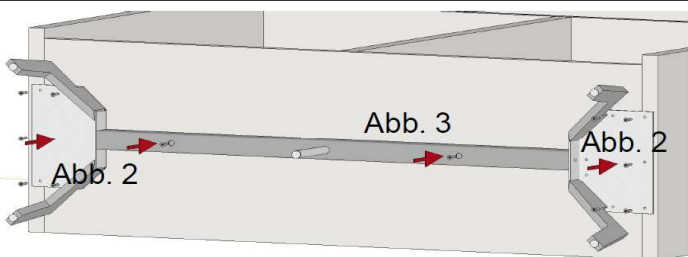

4. Montage Untergestell (Beispiel: Metalluntergestell)  
Korpus auf den Rücken legen. Untergestell unter dem Möbel an Markierungsbohrungen positionieren. Mit Schrauben 3 x 16 mm (Teile Nr.: 51403) Abb.2 / Abb.3 anschrauben. Möbel wieder aufrichten.

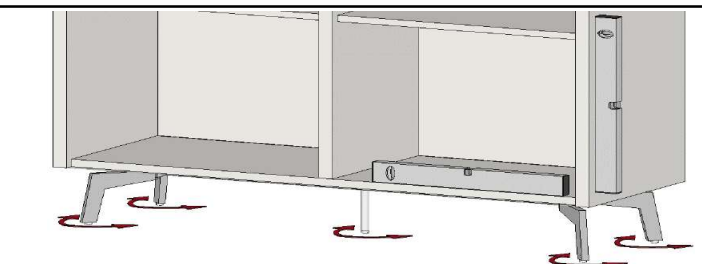

5. Möbel ausrichten mit Wasserwaage:  
Möbelgleiter + mittlerer Stellfuß durch Drehen horizontal und vertikal ausrichten.

6. Zusatzartikel Untergestellbeleuchtung: LED-Streifen mit rückseitigen Klebestreifen vorne unter dem Korpus befestigen. Ggf. LED-Streifen mit Montageclips an Markierungsbohrungen festschrauben.



Zur endgültigen Ausrichtung und als Kippsicherung ist eine bauseitige Fixierung des Möbels zwingend erforderlich. Bei Nichtverwendung der Kippsicherung gemäß Montageanleitung droht ein unbeabsichtigtes Umkippen der Möbel!



# Assembly instruction „ANDRA“:

## Underframe for standing cabinets (wood & metal) S780



Figure 1: connection metal underframe


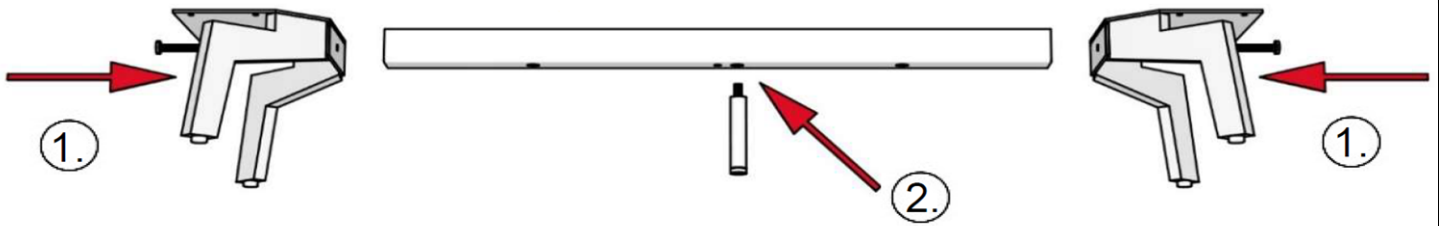




Figure 2: stabilisation for wooden underframe

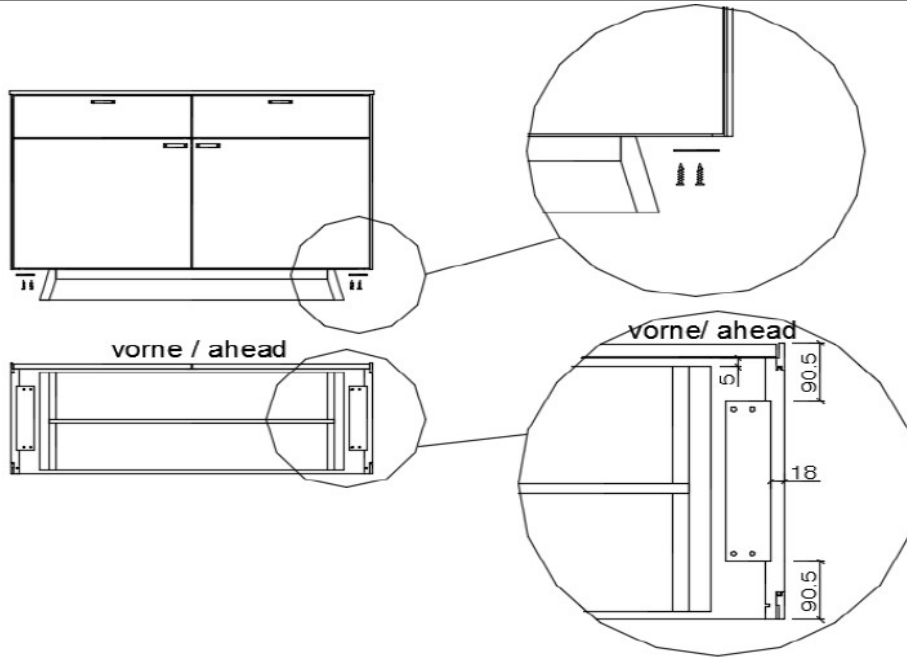

1. Connecting the metal underframe of Fig. 1: Connect the side parts to the steel frame. To do this, screw in the M6 x 20 mm round-head screw (part no. 51245) using the SW4 Allen key (part no. 50810) as shown in fig. 1 step 1.

2. Only wooden underframe: for stabilisation of the carcass fasten additional metal sheets 250x60x2mm (part-nr. 50637) with screws 6,3x13mm (part-nr. 51215) under the body as shown in fig. 2.

3. Only metal underframe: Screw the additional adjusting foot (from furniture widths of 120 cm) centrally below the frame into the thread (fig 1 step 2).

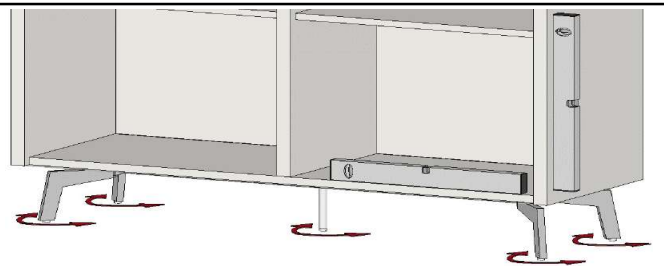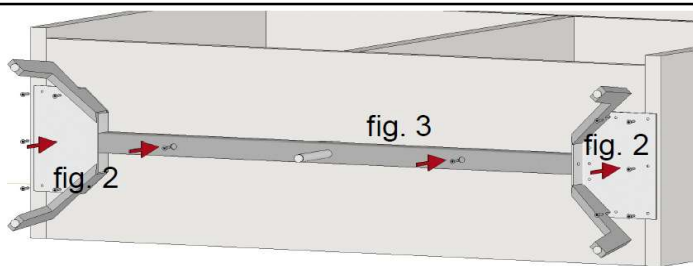

4. Assembly of the underframe (example metal underframe): Lay the carcass on its back. Position the underframe under the furniture at the marking holes. Screw it on with 3.0 x 16 mm screws (part no. 51403) fig. 2 / fig. 3. Set up the furniture again.

5. Align the furniture with a spirit level: Align furniture glides + middle adjusting foot horizontally and vertically by turning.

6. Additional item underframe lighting: Attach LED strips with adhesive strips on the back under the carcass at the front. If necessary, screw LED strips to marking holes with mounting Clips.



For final alignment and to prevent the unit from tipping over, it is essential that the unit is secured on site. If the anti-tip device is not used in accordance with the assembly instructions, there is a risk of the furniture tipping over unintentionally!

