

Aufbauanleitung "CREDENZA":

Standelemente mitSockelfüßen




Das mitgelieferte Befestigungsmaterial (Dübel und Schrauben) ist ausschließlich für die Befestigung von Bauteilen an Beton und/oder festem Mauerwerk geeignet. Bitte beachten Sie auch bei den Wandmontageelementen die max. Belastungswerte. Die Wandbeschaffenheit ist idealerweise bei Auftrags- erfassung zu erfragen und spätestens vor der Montage unbedingt von fachkundigem Personal zu prüfen. Bei abweichender Beschaffenheit (z. B. Leichtbauwänden) ist eine andere, der Belastung angemessene Befestigung bauseits vorzunehmen. Klären Sie elektrische Vorleistungen für Anschluss- und Gerätetechnik. Frei hängende Beleuchtungen erfordern Kabelkanallösungen auf oder unter Putz.

Diese Aufbauanleitung ist gültig für folgende Bestell-Nummern:


Lowboard: S600 - S611 | Sideboard: S616 - S646 | Highboard: S647 - S657 | Vitrine: S658 - S659

Maximale Belastbarkeit: Einlegeboden: 15kg | Glasboden: 5kg | Schubkasten: 5kg


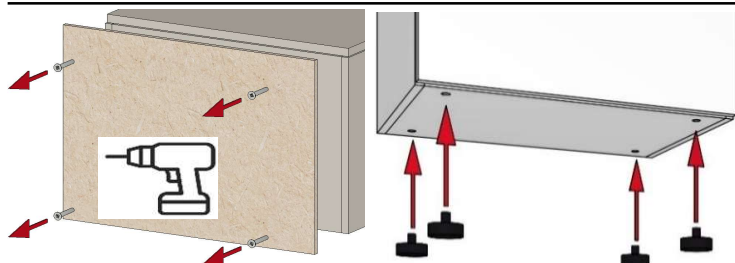


1. Transportschutz unterhalb des Sockelbodens abschrauben (nicht abschlagen oder treten!) und entsorgen. Nivelliergleiter (Teile-Nr. 50611) mit dem Zapfen in den Sockelboden setzen.

Alle Excenter auf festen Sitz prüfen, ggf. nachziehen und das Kastenmöbel auf einem festen und ebenen Untergrund platzieren.

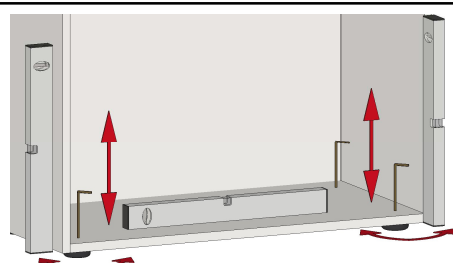


2. Ggf. Frontteile (Schubkästen, Klappen, Türen) ausbauen. Möbelgleiter durch Drehen im Uhrzeigersinn auf den Nullpunkt stellen, horizontal und vertikal ausrichten. Korrekturen von innen mittels Inbusschlüssel SW4 oder von außen mit Hand vornehmen. Löcher mit Abdeckkappen Ø10mm (Teile-Nr. 50422-01-XX) schließen.

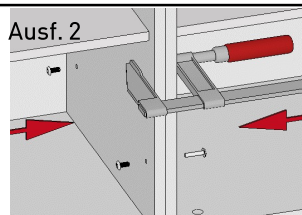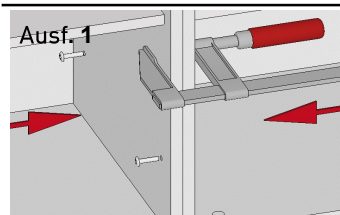


3. Verbindung Korpusseiten (zwei Ausführungen möglich!):

Ausführung 1 (linke Darstellung): Mit Tellerkopfschraube 4x30mm (Teile-Nr. 51458 / 51266), wenn nur einseitig vorgebohrt ist.

Ausführung 2 (rechte Darstellung): Mit Möbelschraube M4x10mm / M4x15mm (Teile-Nr. 51203 / 51283) und Gewindeendhülse M4x27mm / M4x22mm (Teile-Nr. 51290 / 51285), wenn beide Seiten durchgebohrt sind, bzw. vorgebohrte Löcher bauseits mit Bohrer Ø 5mm durchbohren (gegen Ausrisse Holzstück o. Ä. gegenlegen).

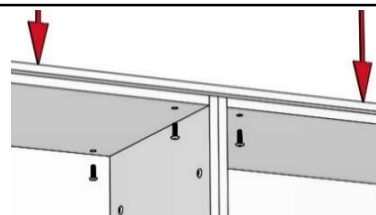


4. Deckblattmontage (sofern nicht vormontiert): Deckblatt von innen mit Möbelschraube M4x20mm (Teile-Nr. 51254 / 51264) festschrauben.

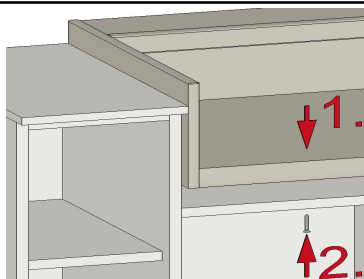


5. Montage Ablagefächer (sofern nicht vormontiert): Fach in den Korpus einsetzen und von innen mit Tellerkopfschraube 4x30mm (Teile-Nr. 51458 / 51266) im Korpus fixieren.

6. Zusatzartikel Beleuchtung: → siehe Aufbauanleitung "Anschlussplan Beleuchtung" und "Dimmer smart".

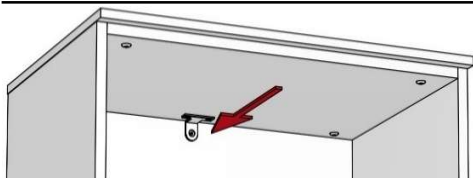

Variante 7.A

Bei Nichtverwendung der Kippsicherung gemäß Montageanleitung droht ein unbeabsichtigtes Umkippen der Möbel!

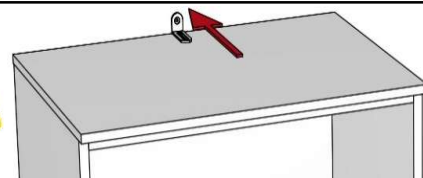

Variante 7.B


oder
(Lowboards ohne Kippsicherung)

7.A Kippsicherung innen, Möbelhöhe ca. 89-140cm: Mit kleinem Bohrer durch vormontierten Winkel und Rückwand bohren, um Bohrposition am Mauerwerk zu markieren. Ø 8mm Bohrung in Mauerwerk bohren und Dübel 8x51mm (Teile-Nr. 50802) verankern. Möbel mit Spanplattenschraube 5x70mm (Teile-Nr. 00210) an der Wand befestigen.

7.B Kippsicherung außen, nur bei Möbelhöhe ca. 208cm: Set "Wandbestigung" (Teile-Nr. 50570) verwenden. Anbringung oben auf dem Deckblatt.

8. Nur S658: Glasgriff (Teile-Nr. 51106-01-XX) mit KS-Schraube M4x12 (Teile-Nr. 51210) anbringen. Fronten einsetzen, Zierkappen (Teile-Nr. 50618) auf Türscharniere klipsen und Abdeckkappen (50430-01-XX) nur auf versenkte Excentergehäuse setzen.

9. Die Fuge zwischen Front und Korpus kann über Drehen des Auswerfers eingestellt werden.

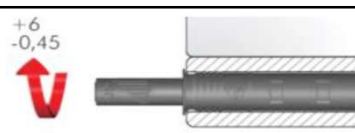

Assembly instructions "CREDENZA": Cabinet with feet




The fitting materials provided with this product (dowels and screws) are only suitable for fixing parts to concrete and/or solid masonry. Please note the maximum load the wall-mounted elements can carry. Ideally, the suitability of the wall should be checked before the order is placed and must be checked by specialist staff before the cabinet is assembled at the latest. If the condition of the wall is not suitable (e.g. if it is a lightweight partition wall), then another type of fixture suitable for the load that is to be carried should be used. Check the electrical input of any connection or device technology. Free-hanging light fixtures require cable duct solutions that are either on or under plaster.

These assembly instructions are valid for the following order no.:


Lowboard: S600 - S611 | Sideboard: S616 - S646 | Highboard: S647 - S657 | Cabinet: S658 - S659

Maximum load-bearing capacity: wood shelf: 15kg | glas shelf: 5kg | drawer: 5kg


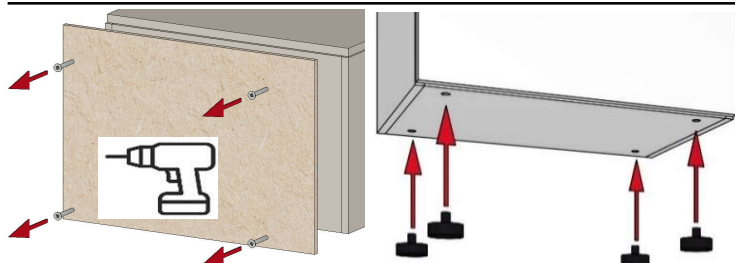


1. Unscrew the transport protection from beneath the base (do not knock or kick it off!) and dispose of it. Put the furniture gliders (part no. 50611) with the dowels in the base.

Check that all the eccentrics are firmly seated, retighten if necessary, and place the cabinet onto a stable and level floor.

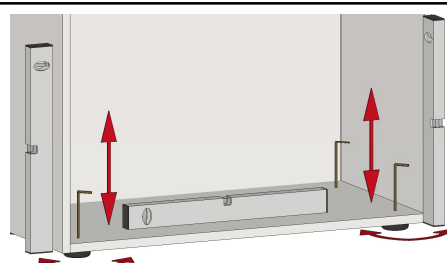


2. Remove front parts (e.g. drawers, doors). Set the furniture gliders to the zero point by turning them in a clockwise direction and then adjust them vertically and horizontally. Make any other adjustments from the inside with an Allen key or from the outside by hand. Cover any holes for the feet with the cover caps $\varnothing 10\text{mm}$ (part no. 50422-01-XX).

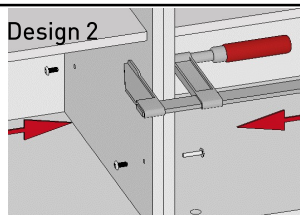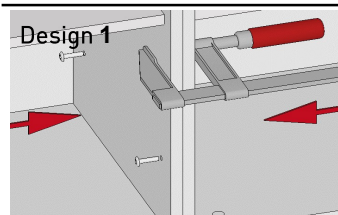


3. Connection of carcass sides (two designs possible!):

Design 1 (left picture): If predrilled from one side only use wafer head screws 4x30mm (part no. 51458751266).

Design 2 (right picture): If both side panels are predrilled or drill through marked holes with a $\varnothing 5\text{mm}$ drill bit (place a piece of wood or similar against the other side to prevent tear-outs) join the side panels with furniture screws M4x10mm/M4x15mm (part no. 51203/51283) and thread end sleeves M4x27mm/M4x22mm part no. 51290/51258)

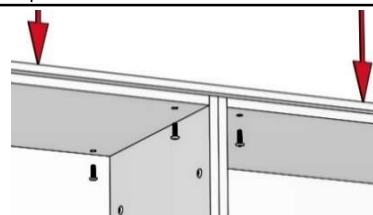


4. Top panel assembly (if not pre-assembled): Fix the top panel from the inside with furniture screws M4x20mm (part-no. 51264 or 51254).

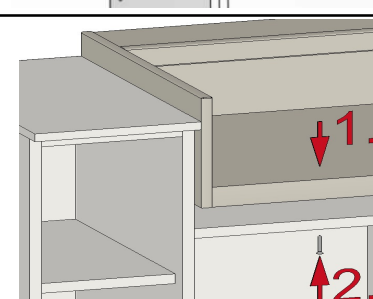


5. Assembly of storage compartments (if not pre-assembled): Insert the compartment into the cabinet and secure it from the inside with wafer head screws 4x30 mm (part no. 51458 / 51266).

6. Additional item lightning → See assembly instruction "Wiring diagramm" and "Dimmer smart".

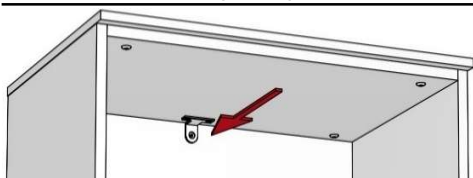

Design 7.A

If the anti-tip device is not fixed in accordance with the assembly instructions there is a risk of the furniture tipping over accidentally!

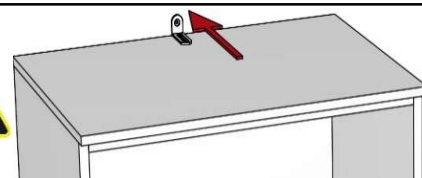

Design 7.B

(Lowboards with no anti-tip protection)

7.A Inner anti-tip protection, furniture height 89-140cm:

Drill through the pre-assembled bracket and rear panel with a small drill bit to mark the drilling position on the wall. Drill an $\varnothing 8\text{mm}$ hole in the wall and anchor the 8x51 mm dowel (part no. 50802). Secure the furniture to the wall using a 5x70 mm chipboard screw (part no. 00210).

7.B Outer anti-tip protection, only furniture height 208cm

Use "Wall fastening" set (part no. 50570).

Fix to the top of the unit.

8. Type S658 only: Fit glass handle (part no. 51106-01-XX) with plastic screw M4x12 (part no. 51210). Insert fronts, clip decorative caps (part no. 50618) onto door hinges and place cover caps (50430-01-XX) only on recessed eccentrics.

9. The gap between the front and the body can be adjusted by turning the ejector.

