



Montageanleitung für Hängeregale

(Abbildungen zeigen Beispielartikel)

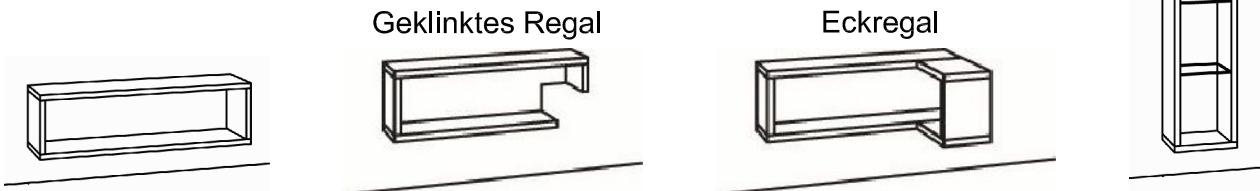


1. Legen Sie die Position des entsprechenden Artikels an der Zimmerwand fest (Geklinkte Regale nur in Kombination mit anderen Artikeln).
2. Bohrmaße für Aufhängeschiene laut Abb. 1 an die Zimmerwand übertragen. Zusätzliche Maße (Abb. 2) für Eckregale beachten. Ausgeklinkte Regale nur mit einseitiger Aufhängung (Abb. 3). Ø8-mm-Löcher in Mauerwerk bohren und Nylondübel Ø8x40 mm (Teil-Nr. 50801 aus Beschlagkarton) einsetzen. Aufhängeschiene (Teil-Nr. 50415) mit 2x Schraube Ø5,5x50 mm (Teil-Nr. 51201) anschrauben.
Wichtig: Das mitgelieferte Befestigungsmaterial (Dübel und Schrauben) ist ausschließlich für die Montage von Bauteilen an Beton und/oder festem Mauerwerk geeignet. Bei abweichender Wandbeschaffenheit ist eine der Belastung angemessene Befestigung bauseits vorzunehmen!

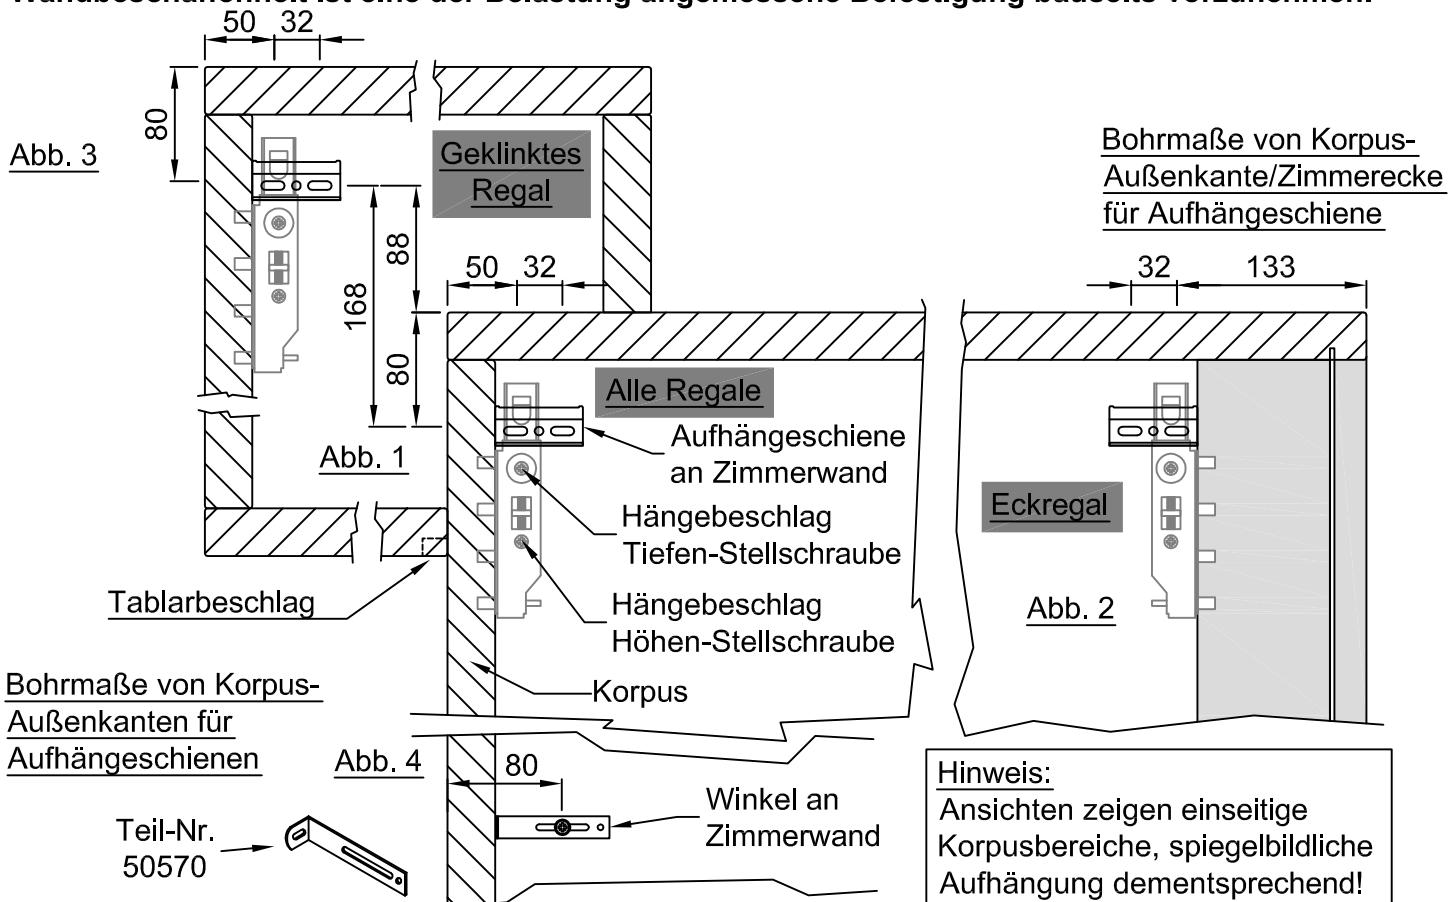


3. Für Korpusteile mit Beleuchtung: Siehe => Anschlussplan Beleuchtung.
4. Hängen Sie den Korpus an die Zimmerwand. Für geklinkte Regale: Montieren Sie den Tablarbeschlag (Teil-Nr. 50034) an das entsprechende Möbel. Ausrichten mit der Wasserwaage: Eine horizontale Korrektur des Möbels ist mit der unteren Höhen-Stellschraube am Hängebeschlag vorzunehmen. Mit der oberen Stellschraube den Abstand zur Zimmerwand bzw. die vertikale Neigung einzustellen. ACHTUNG! Alle Hängebeschläge aus Gründen der Tragfähigkeit gleichmäßig ausrichten und beladen!
5. Für Hängeregal 7042 (=Breite 34cm, Höhe 120cm): Zur seitlichen Fixierung werden zwei Winkel des Wandbefestigungs-Sets (Teil-Nr. 50570) hinter dem Möbel im unteren Bereich an der Zimmerwand montiert. Dazu Korpusaußenkante an Zimmerwand markieren und Hängeelement abnehmen. Maße übertragen (Abb. 4) und Wandbefestigungs-Set anschrauben. Möbel wieder aufhängen.
6. Verschließen Sie die Löcher in der Rückwand und in den Seiten mit Abdeckkappen.
7. Für Regale mit Glasböden: Bodenträger (Teil-Nr. 50551) in Bohrlöcher einsetzen und Böden auflegen.
8. Für Korpusteile mit Glastüren (Zubehör): Montieren Sie die Griffe, siehe => Montageanleitung Griffe.

Assembly instruction for bridging shelves

(figures show examples)

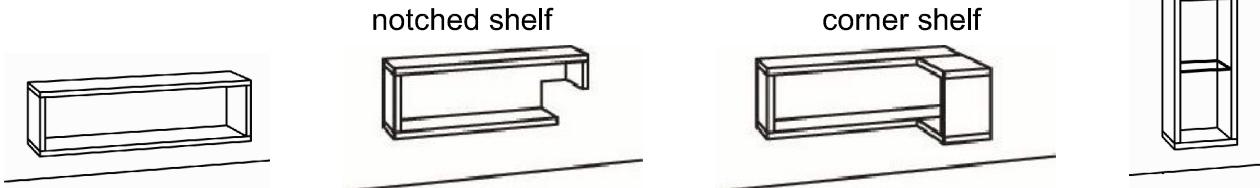


1. Define the position of the cabinet on the wall (notched shelf only in combination with other items).
 2. Transfer the drilling measurements for the hanging rails (see fig. 1) to the wall. Please note the additional measurements (fig. 2) for corner shelves. Notched shelves only with hanging fitting on one side (fig. 3). Drill the holes with a 8 mm drilling bit and insert the nylon anchor bolt (part no. 50801 from the fitting box). Screw the hanging rails (item no. 50415) with 2x Ø5,5x50 mm screws (part no. 51201) to the wall.
- IMPORTANT: The provided fittings (screws and anchor bolts) are only for cement and/or solid brickwork. If the consistency of the wall is different you must use suitable fittings that can hold the load!**

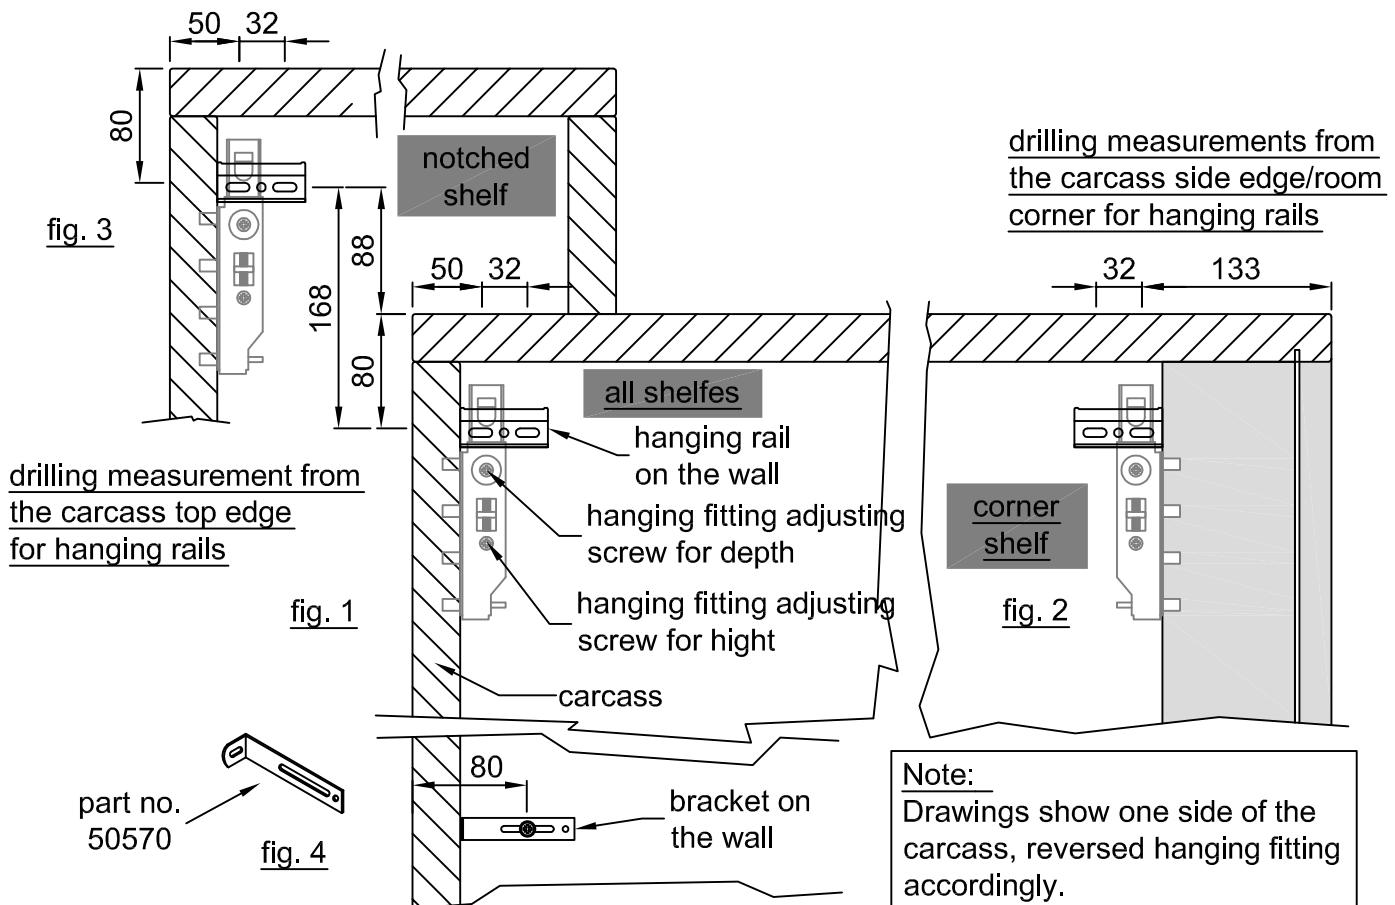


3. For items with lighting: See => assembly instruction for lighting.
4. Hang the carcass on the wall. Level out the carcass by use of water level: Horizontal adjustment can be made by use of the lower adjusting screw. The upper adjusting screw is for vertical adjustment or distance between carcass and wall. PLEASE NOTE! All hanging fittings must be equally loaded and adjusted!
5. For bridging shelf 7042 (=width 34 cm, height 120 cm): For lateral attachment please fix 2 brackets of the wall-assembling-kit (part no. 50570) behind the cabinet in the lower part of the back to the wall. Mark the edge of the cabinet on the wall and take back down the cabinet. Mark the drilling holes on the wall (fig. 4). Assemble the wall-assembling-kit and hang up the cabinet again.
6. Close the holes in the back and the sides with the plastic covers.
7. For shelves with glass shelves: Insert the shelf supports (part no. 50551) into the holes and put on the shelves.
8. For shelves with glass doors (supplementary equipment): Assemble the handles => see assembly instruction for handles.

Assembly instruction for bridging shelves

(figures show examples)

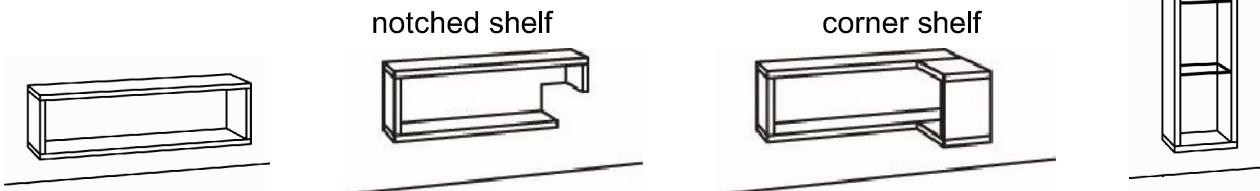

1. Define the position of the cabinet on the wall (notched shelf only in combination with other items).
 2. Transfer the drilling measurements for the hanging rails (see fig. 1) to the wall. Please note the additional measurements (fig. 2) for corner shelves. Notched shelves only with hanging fitting on one side (fig. 3). Drill the holes with a 8 mm drilling bit and insert the nylon anchor bolt (part no. 50801 from the fitting box). Screw the hanging rails (item no. 50415) with 2x Ø5,5x50 mm screws (part no. 51201) to the wall.
- IMPORTANT: The provided fittings (screws and anchor bolts) are only for cement and/or solid brickwork. If the consistency of the wall is different you must use suitable fittings that can hold the load!**

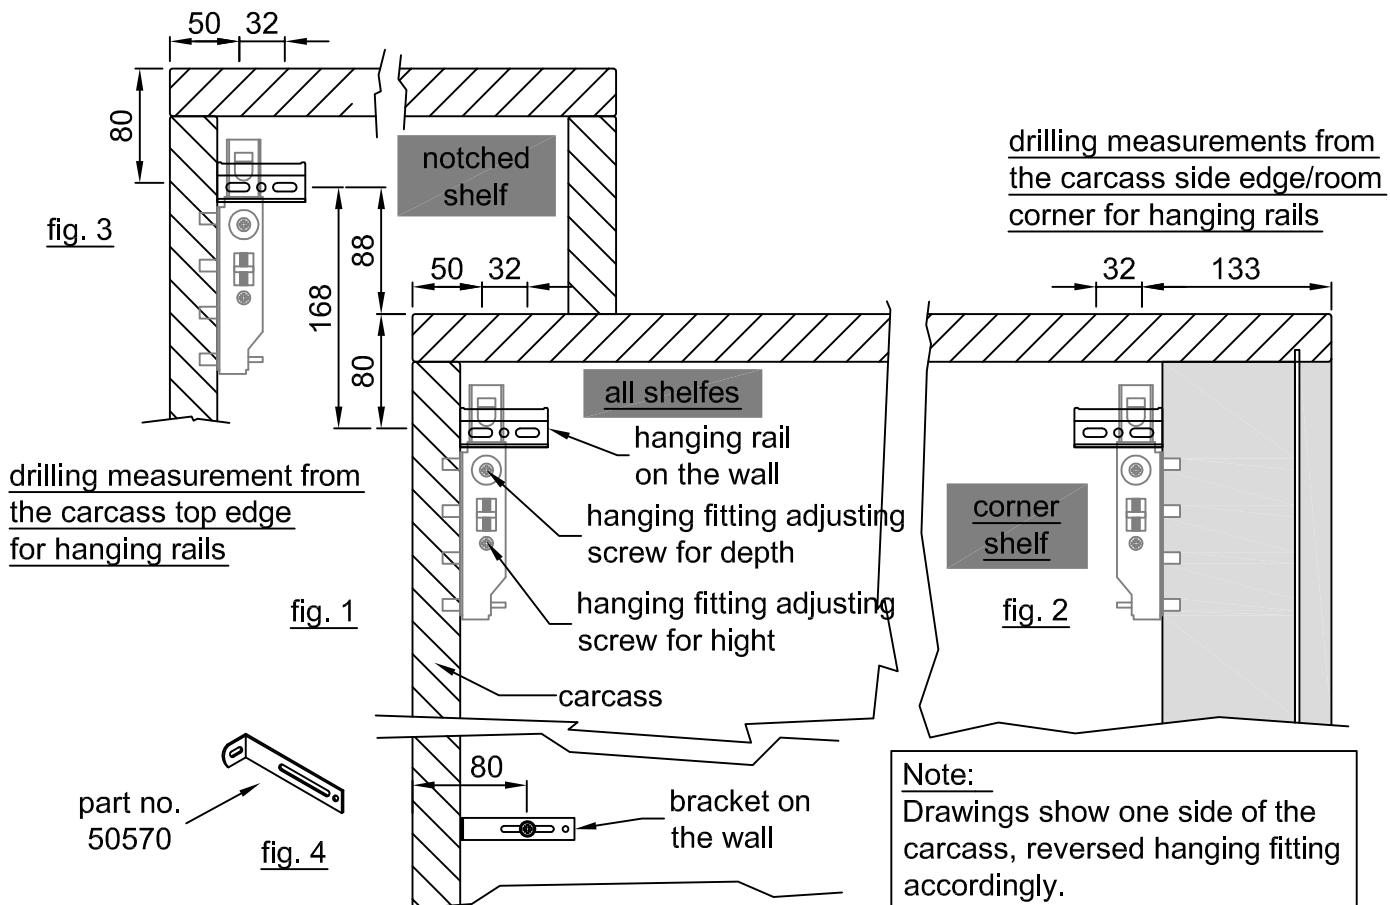

3. For items with lighting: See => assembly instruction for lighting.
4. Hang the carcass on the wall. Level out the carcass by use of water level: Horizontal adjustment can be made by use of the lower adjusting screw. The upper adjusting screw is for vertical adjustment or distance between carcass and wall. PLEASE NOTE! All hanging fittings must be equally loaded and adjusted!
5. For bridging shelf 7042 (=width 34 cm, height 120 cm): For lateral attachment please fix 2 brackets of the wall-assembling-kit (part no. 50570) behind the cabinet in the lower part of the back to the wall. Mark the edge of the cabinet on the wall and take back down the cabinet. Mark the drilling holes on the wall (fig. 4). Assemble the wall-assembling-kit and hang up the cabinet again.
6. Close the holes in the back and the sides with the plastic covers.
7. For shelves with glass shelves: Insert the shelf supports (part no. 50551) into the holes and put on the shelves.
8. For shelves with glass doors (supplementary equipment): Assemble the handles => see assembly instruction for handles.