


Aufbauanleitung "GAME":

Untergestell für Standelemente (Metall) 9821

VENJAKOB




Abb. 1: Metalluntergestell

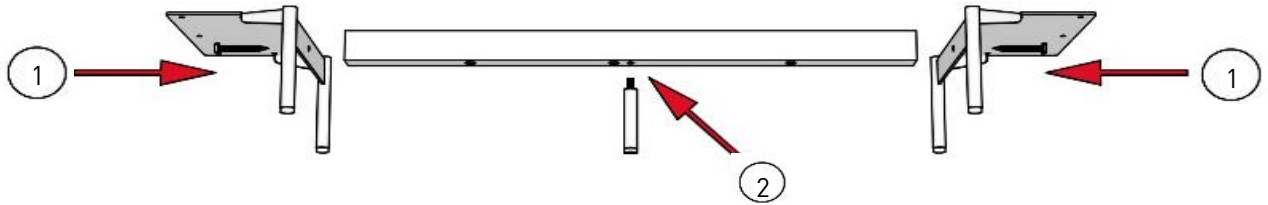

1. Verbindung Metalluntergestell Abb.1:

Seitenteile mit Stahlzarge verbinden. Dazu Schraube M6x20mm (Teile-Nr.51246) mittels Inbusschlüssel SW4 einschrauben.

2. Zusätzlicher Stellfuß (ab Möbelbreite 120cm) mittig unter der Stahlzarge in das Gewinde eindrehen.

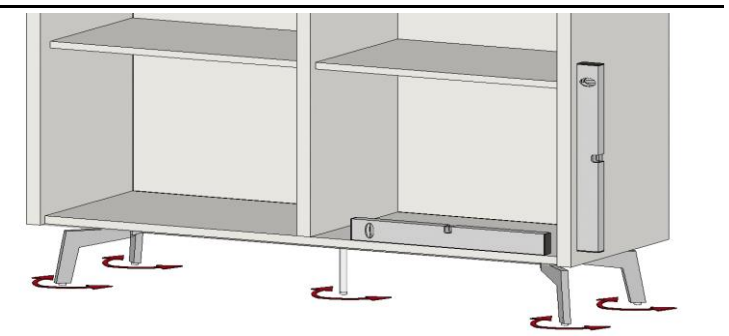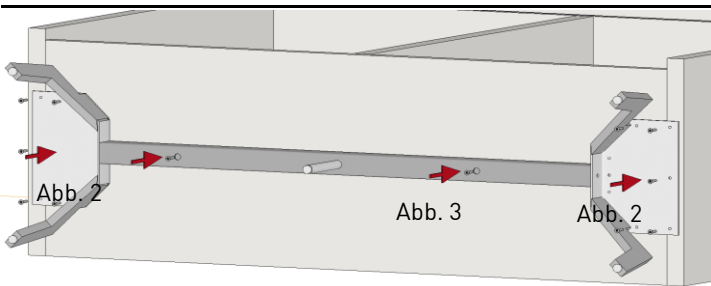

3. Montage Untergestell (Beispiel: Metalluntergestell)

Korpus auf den Rücken legen. Untergestell unter dem Möbel an Markierungsbohrungen positionieren. Mit Schrauben 3x16mm (Teile Nr.51403) Abb.3 / Abb.4 anschrauben. Möbel wieder aufrichten.

4. Möbel ausrichten mit der Wasserwaage

Möbelgleiter + mittlerer Stellfuß durch Drehen horizontal und vertikal ausrichten.

5. Zusatzartikel Untergestellbeleuchtung: LED-Streifen mit rückseitigen Klebestreifen vorne unter dem Korpus befestigen. Ggf. LED-Streifen mit Montageclips an Markierungsbohrungen festschrauben.

Zur endgültigen Ausrichtung und als Kippsicherung ist eine bauseitige Fixierung des Möbels zwingend erforderlich.
Bei Nichtverwendung der Kippsicherung gemäß Montageanleitung droht ein unbeabsichtigtes Umkippen der Möbel!




Assembly instruction „GAME“:

Underframe for standing cabinets (metal) 9821

VENJAKOB



Fig. 1: metal underframe

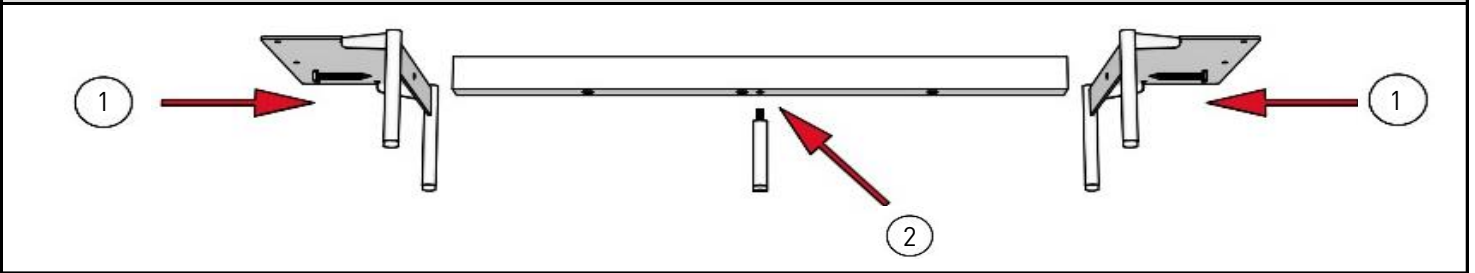

1. Connecting the metal underframe of fig. 1:


Connect the side parts to the steel frame. To do this, screw in the M6x20mm (Part No.51246) screw using the SW4 Allen key.

2. Screw the additional adjusting foot (from furniture widths of 120cm) centrally below the steel frame into the thread.

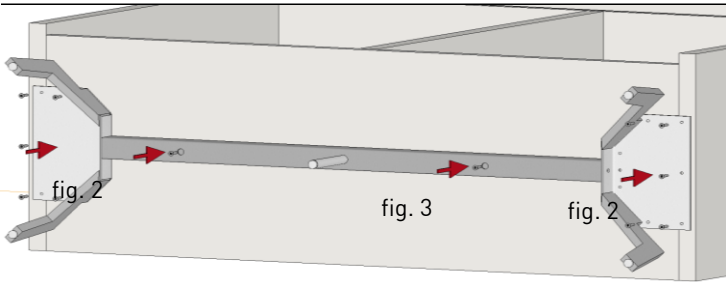

3. Assembly of the underframe (example: metal underframe)

Lay the carcass on its back. Position the underframe under the furniture at the marking holes. Screw it on with 3x16mm screws (Part No.51403) Fig. 3 / Fig. 4. Set up the furniture again.

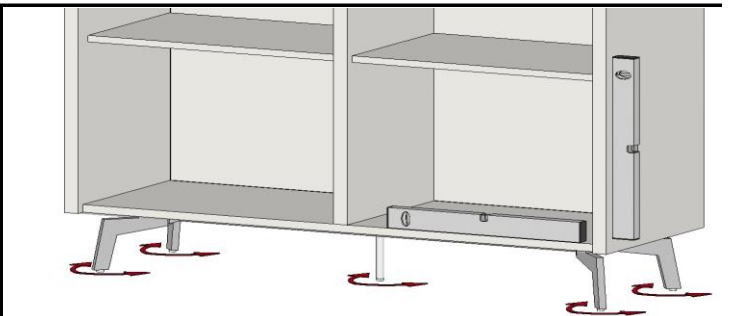

4. Align the furniture with a spirit level

Align furniture glides + middle adjusting foot horizontally and Vertically by turning.

5. Additional item - underframe lighting: Attach LED strips with adhesive strips on the back under the carcass at the front. If necessary, screw LED strips to marking holes with mounting clips.



For final alignment and to prevent the unit from tipping over, it is essential that the unit is secured on site.
If the anti-tip device is not used in accordance with the assembly instructions,
there is a risk of the furniture tipping over unintentionally!

