
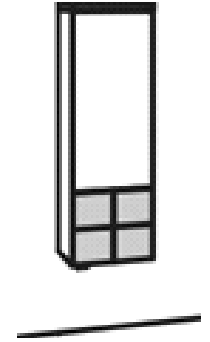
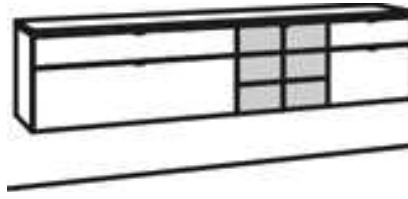


## Aufbau- und Montageanleitung für Hängetypen und Hängesideboards

(Abbildungen zeigen Beispielartikel)

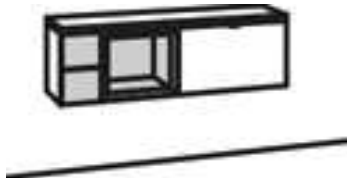


1. Entfernen Sie die Verpackung und den Transportschutz.
2. Legen Sie die Position des entsprechenden Artikels an der Zimmerwand fest.
3. Bohrmaße für Aufhängeschienen laut Abb. 1 an die Zimmerwand übertragen. Ø8-mm-Löcher in das Mauerwerk bohren und Nypondübel Ø8x40 mm (Teil 50801) einsetzen. Aufhängeschiene (Teil 50415) mit 2x Schraube Ø5,5x50 mm (Teil 51201) anschrauben.

**Wichtig: Das mitgelieferte Befestigungsmaterial (Dübel und Schrauben) ist ausschließlich für die Montage von Bauteilen an Beton und/oder festem Mauerwerk geeignet. Bei abweichender Wandbeschaffenheit ist eine der Belastung angemessene Befestigung bauseits vorzunehmen!**

Abb. 1


Bohrmaß  
von Korpus-  
Oberkante für  
Aufhängeschiene

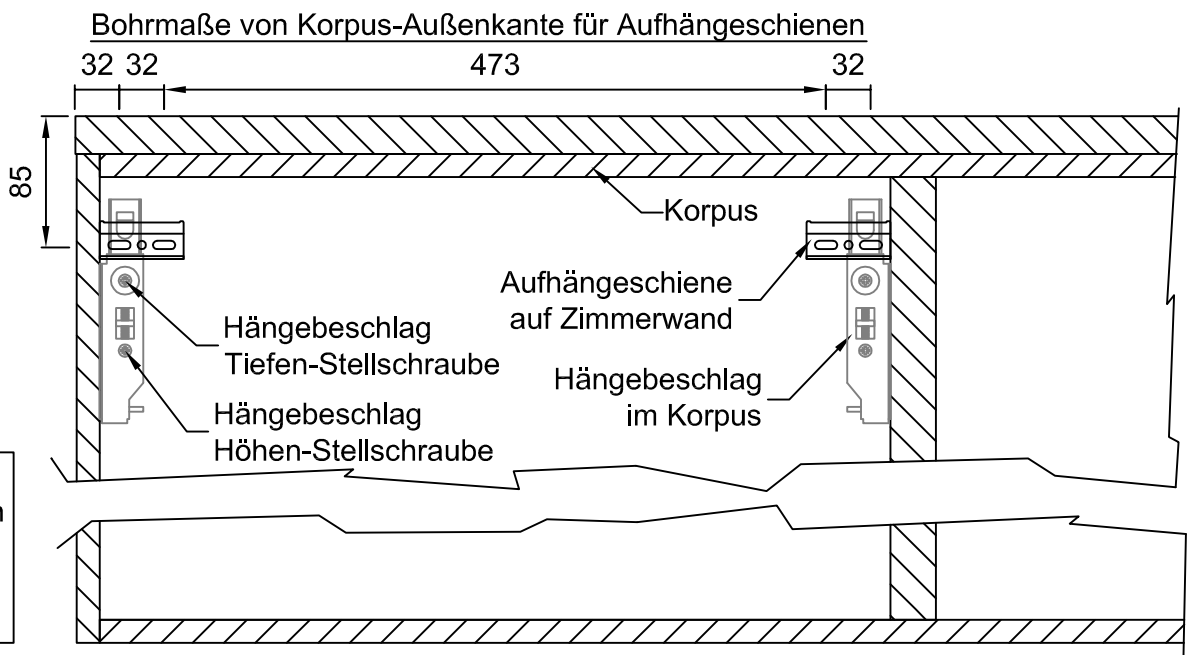

4. Für Korpussteile mit Beleuchtung: Siehe => Anschlussplan Beleuchtung.
5. Soweit für Montage erforderlich: Frontteile ausbauen.
6. Für Korpussteile mit offenen Fächern: Siehe => Montagehinweis für offene Fächer.
7. Hängen Sie den Korpus an die Zimmerwand. Ausrichten mit der Wasserwaage: Eine horizontale Korrektur des Möbels ist mit der unteren Höhen-Stellschraube am Hängebeschlagn vorzunehmen. Mit der oberen Stellschraube den Abstand zur Zimmerwand bzw. die vertikale Neigung einstellen. **ACHTUNG!** Alle Hängebeschlagn aus Gründen der Tragfähigkeit gleichmäßig ausrichten und belasten!
8. Verschließen Sie die Löcher in der Rückwand mit Abdeckkappen.
9. Frontteile wieder einbauen. Fronten ggfs. ausrichten. Zierkappen (Teil 50620) auf die Türscharniere aufklipsen.
10. Montieren Sie die Griffe: Siehe => Montageanleitung Griffe.


**Assembly instruction for hanging cabinets and hanging sideboards**

(the pictures show examples)

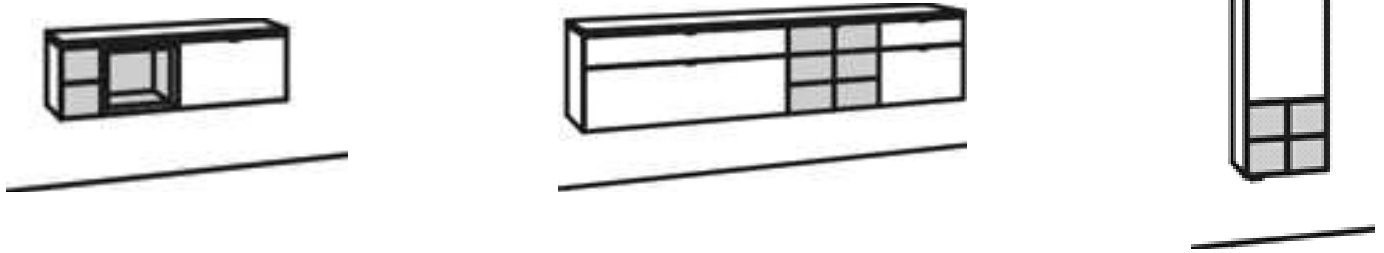

1. Remove the packing and the transport lock.
2. Define the position of the cabinet on the wall.
3. Transfer the drilling measurements for the hanging rails (see fig. 01) to the wall. Drill the holes with a 8 mm drilling bit and insert the nylon anchor bolt (item no. 50801 from the fitting box). Screw the hanging rails (item no. 50415) with 2x Ø5,5x50 mm screws (item no. 51201) to the wall.

**IMPORTANT: The provided fittings (screws and anchor bolts) are only for cement and/or solid brickwork. If the consistency of the wall is different you must use suitable fittings that can hold the load!**

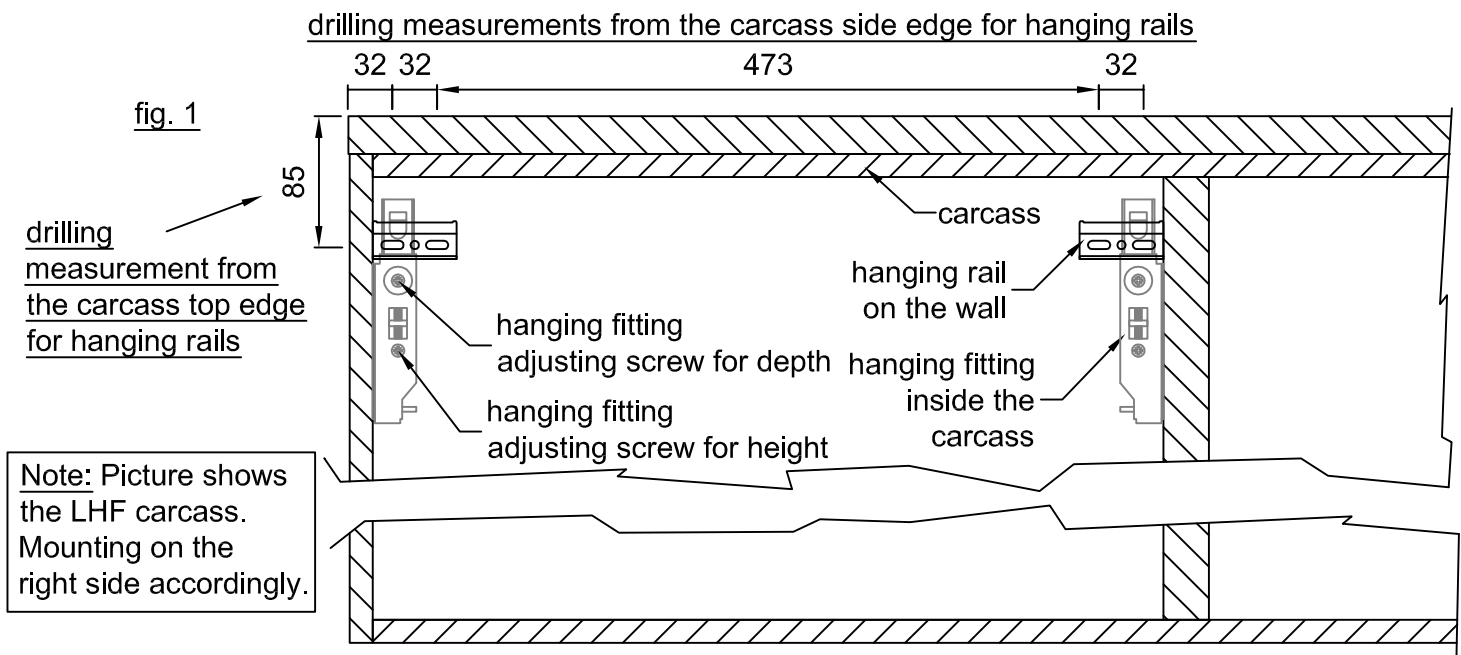

4. For items with lighting: See => assembly instruction for lighting.
5. If necessary disassemble the front.
6. For items with open spaces: see => assembly instruction for open spaces
7. Hang the carcass on the wall. Level out the carcass by use of water level: Horizontal adjustment can be made by use of the lower adjusting screw. The upper adjusting screw is for vertical adjustment or distance between carcass and wall. PLEASE NOTE! All hanging fittings must be equally loaded and adjusted!
8. Close the holes in the back with the plastic covers.
9. Reassemble the front parts and adjust them. Put the ornamental clips (part no. 50620) on the hinges of the doors.
10. Assemble the handles => See assembly instruction handles.