

macao

Montagehinweis für Hängeelemente 7916 - 7919

1. Legen Sie an der Wand die Oberkante und seitliche Position des Hängeelements fest und markieren diese.
2. Zeichnen Sie die Löcher für die Keilleiste wie in der Skizze unten dargestellt an und bohren diese ($d = 8\text{mm}$).
3. Dübel (8×40) einstecken und Keilleiste mit Schrauben (5×80) anschrauben. Darauf achten das die Keilleiste gerade angeschraubt wird. (Wasserwaage verwenden)
4. Hängeelemente auf die Keilleiste hängen.
5. **ACHTUNG** Sichern Sie das Hängeelement mit der Schraube $3 \times 20\text{mm}$ von vorne durch die Rückwand hinter den Schubkästen gegen Aushängen.





VENJAKOB

Vorsprung durch Design und Qualität


Befestigung der Keilleiste

5 Wandbohrungen
 $\varnothing 8\text{mm}$

1 Keilleiste




Keilleiste Wand

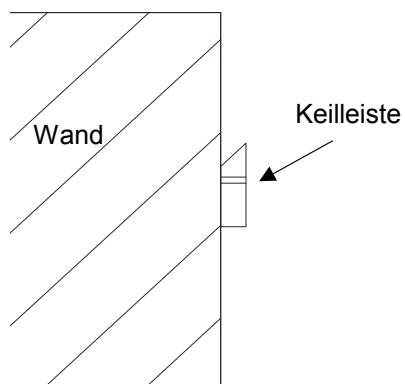


Hängeelement 7917 (7916 spiegelbildlich)

Oberkante Hängeelement

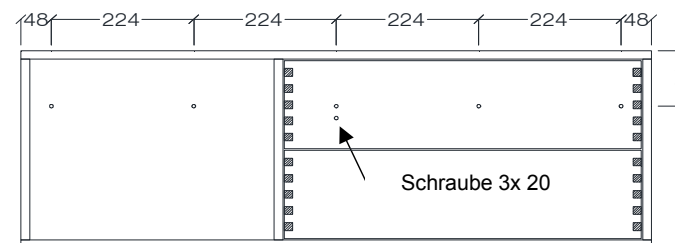

Hängeelement 7919 (7918 spiegelbildlich)

Oberkante Hängeelement

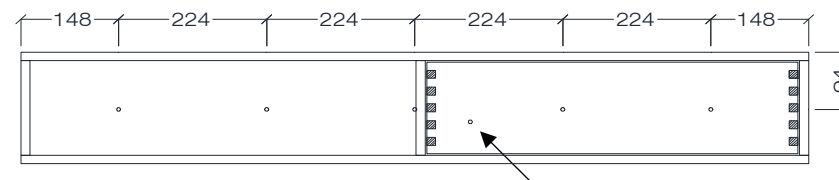

Wichtig: Das mitgelieferte Befestigungsmaterial (Dübel Schrauben) ist ausschließlich für die Montage von Bauteilen an Beton und/oder festem Mauerwerk geeignet. Bei abweichender Wandbeschaffenheit ist eine der Belastung angemessene Befestigung bauseits vorzunehmen!

macao


Assembly information for hanging cabinets 7916 - 7919

1. Define the position of the unit on the wall. Mark the top and side edge.
2. Mark the drilling holes as shown in the below drawing. Drill the holes with a 8 m drilling bit.
3. Insert the anchor bolts(8x40) and screw on the wedge gip with the 5x80 screws. Please make sure that the wedge gip is fixed level. Use spirit level.
4. Hang up the cabinet on the wedge gip.
5. PLEASE NOTE Secure the hanging cabinet from hang out by screwing the 3 x 20 mm screws from the front through the back wall behind the drawers.


VENJAKOB

Vorsprung durch Design und Qualität


Fixing of the wedge gip

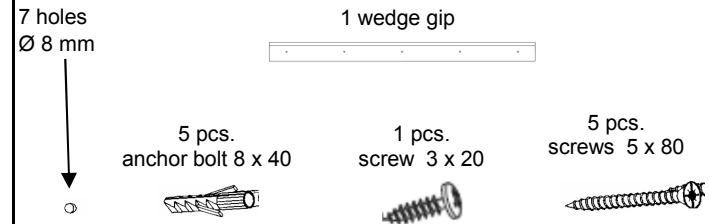


wedge gip on the wall

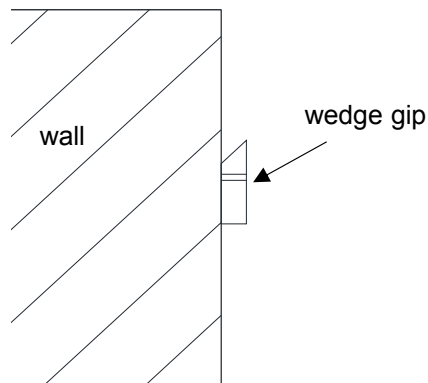

hanging cabinet 7917 (7916 reversed)
top edge hanging cabinet

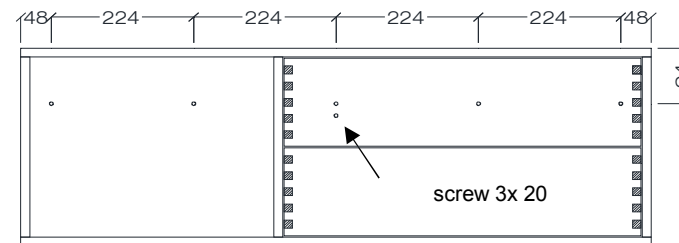

hanging cabinet 7919 (7918 reversed)
top edge hanging cabinet

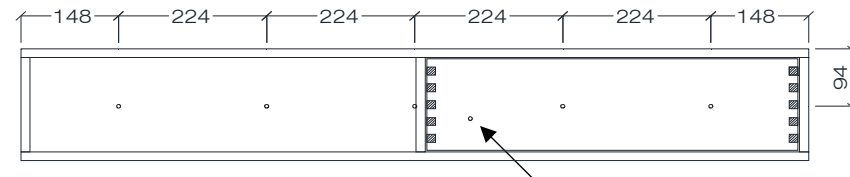

IMPORTANT: The provided fittings (screws and anchor bolts) are only for cement and/or solid brickwork. If the consistency of the wall is different you must use suitable fittings that can hold the load.