








## Korpusmontage (Beispiel)


1. Legen Sie das Möbel mit der Rückseite auf den Boden. Verwenden Sie eine Unterlage, um Beschädigungen zu vermeiden!
2. Schlagen Sie die zusammenschraubten Möbelgleiter von unten in den Sockelboden.

### Befestigungsmaterial


|  |   |  |   |
|--|---|--|---|
| Oberteil Möbelgleiter<br>                   | Unterteil Möbelgleiter<br>                 | Gewindehülse<br>M4, D5x25mm<br> | Möbelgriffschrauben M<br>4 x 15 mm<br><br>M1 |
| Möbelgriffschrauben<br>M4 x 22 mm<br><br>M2 | RW-Spax-Schraube<br>3,5 x 30mm<br><br>RW 1 |  |   |

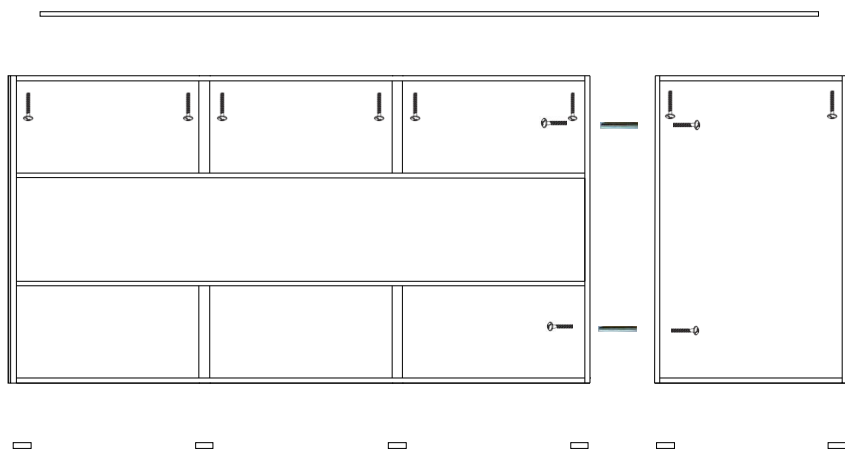

1.

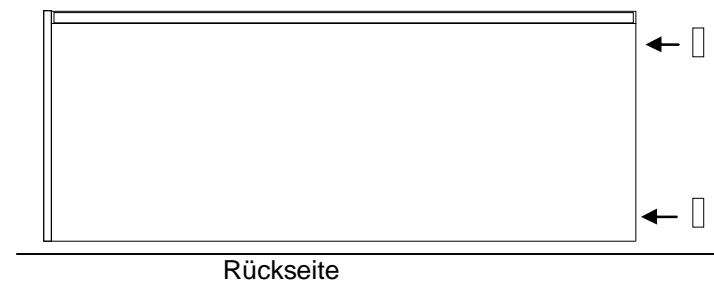


2.

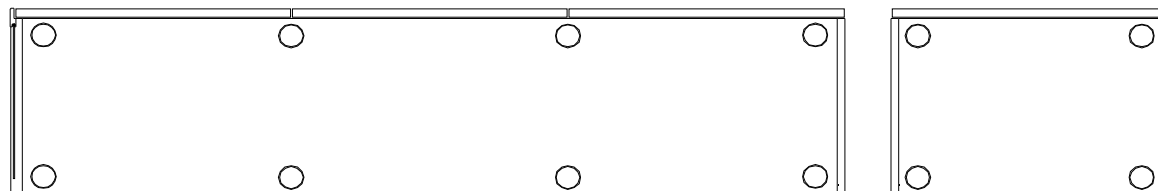





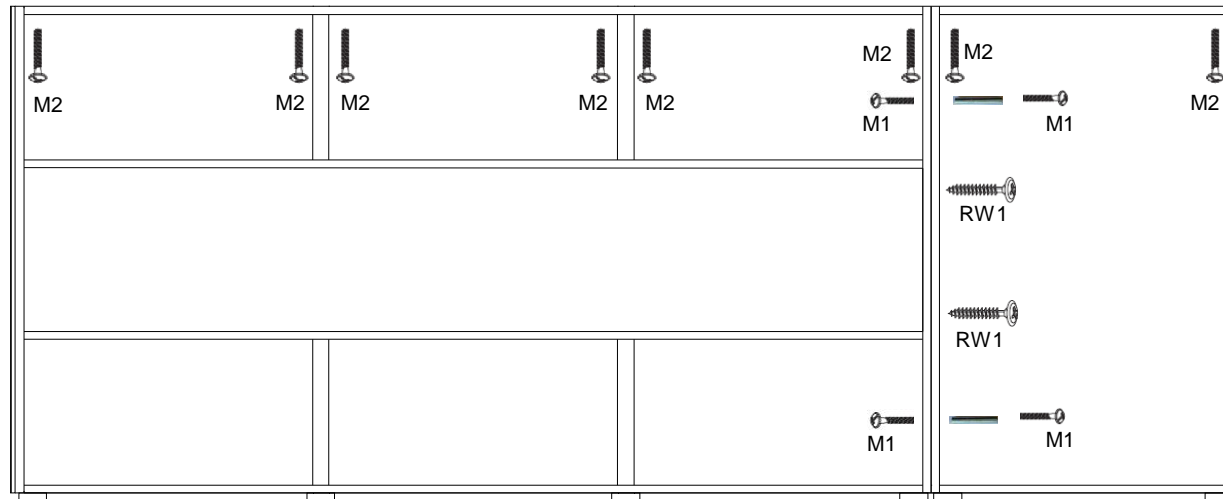

## Korpusmontage (Beispiel)

3. Stellen Sie die Korpen auf und richten diese aus. Stecken Sie die Gewindehülsen durch die Innenseiten und verbinden die Korpen mit den Möbelgriffschrauben M4x15mm. Bei Bedarf können zusätzlich die Spax-Schrauben 3,5x30mm verwendet werden.
4. Schrauben Sie das Blatt mit den Möbelgriffschrauben M4x22mm von unten an den Korpus.




## Assembly of cabinets (example)


### assembly parts

|  |  |   |   |
|--|--|---|---|
| upper part feet<br>           | lower part feet<br>                 | threaded sleeve<br>M4, D5x25mm<br> | screw<br>M 4 x 15 mm<br><br>M1 |
| screw<br>M4 x 22 mm<br><br>M2 | Spax-screw<br>3,5 x 30mm<br><br>RW1 |   |   |


1. Lay the cabinet with the back on the floor. Use an underlay to avoid damages!
2. Drive the assembled feet into the base from below.

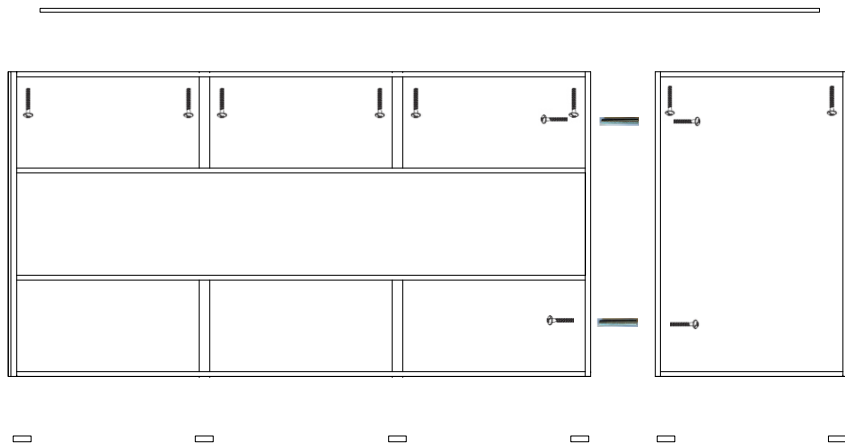

1.

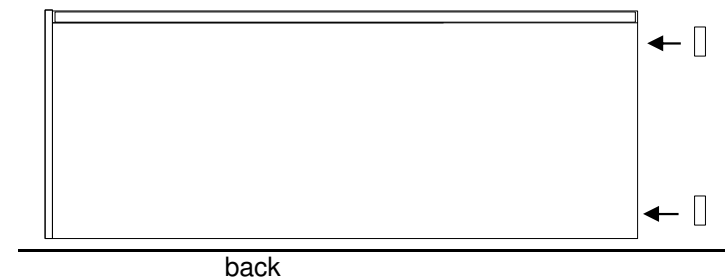

2.

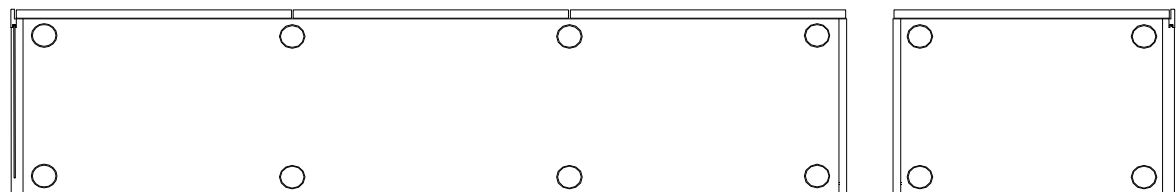

## Korpusmontage (Beispiel)

3. Erect the cabinet and adjust them. Insert the threaded sleeves into the inner side panels and join the carcasses with the screws M4 x 15 mm. If necessary also use the Spax-screws 3,5 x 30 mm.
4. Screw the top to the carcass from below. Use the screws M4 x 22 mm.

