

sentino

Montagehinweis für Paneel

1. Legen Sie an der Wand die Oberkante und seitliche Position des Paneels fest und markieren diese.
2. Zeichnen Sie die Löcher für die Aufhängeplatten wie in der Skizze unten dargestellt an und bohren ($d = 8\text{mm}$) diese.
3. Dübel (8x40) einstecken und Aufhängeplatte mit je zwei Schrauben (5x80) anschrauben.
4. Paneel auf die Tragbleche einhängen; wenn nötig an den Stellschrauben des Aufhängebeschlags einstellen.

VENJAKOB

Vorsprung durch Design und Qualität


Befestigung der Aufhängeplatte

Wandbohrungen
 $\varnothing 8\text{mm}$

Dübel 8x40

Aufhängeplatte

Schrauben 5x80

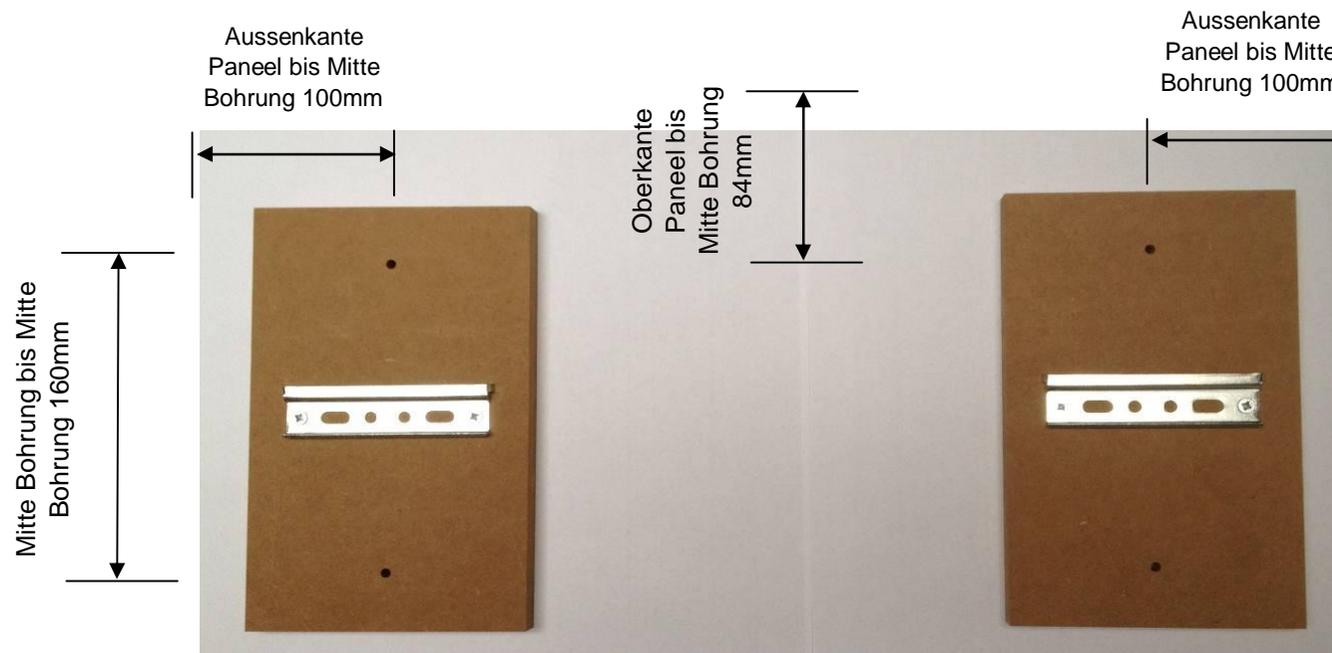

Assembly of panels

1. Devine the position of the panel on the wall. Mark the top and side edge.
2. Mark the drilling holes as shown in the below picture. Drill the holes with a 8 mm drilling bit.
3. Insert the anchor bolts (8x40) and screw on the bearing plates with 2 screws (5x80).
4. Hang up the panel on the bearing plates. If necessary adjust with the adjusting screws on the hanging fitting.

fixing of the hanging plate

2 drilling holes
Ø 8mm



2 piece
anchor bolt 8x40



hanging plate



screws 5x80

