

Sentino (1888 / 1889)


Montagehinweis für Regal-Rückwandpaneel zwischen Regalböden

1. Schrauben Sie die 4 Winkelleisten (mit den Spax-Schrauben 3x20mm) bündig an die hinteren Kanten der Böden jeweils 10mm von der Seite. Beim unteren Boden auf die Oberseite und beim oberen Boden auf die Unterseite (TAB-Seite).
2. Setzen Sie die Rückwand auf die Winkelleiste des unteren Bodens.
3. Setzen Sie dann den oberen Boden auf die Rückwand und die Tablarbeschläge und verriegeln diese. (Trägerteil und Einbohrteil sind nun fest miteinander verbunden.)

1.



unterer Boden

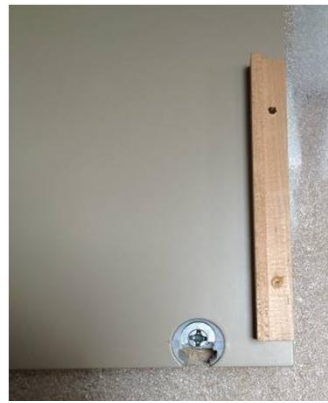

oberer Boden

2.



unten

3.



oben

Sentino (1888 / 1889)


Assembly of shelving unit back panels between shelves

1. Screw the 4 angel bars (with the Spax-screws 3x20 mm) flush to the rear edges of the shelves each 10 mm away from the sides. On the lower shelf on the upside and on the upper shelf on the downside. (TAB-side).
2. Put the back panel on the angle bar of the lower shelf.
3. Now put the upper shelf on the back panel and the shelf pegs and close them.

1.



Lower shelf

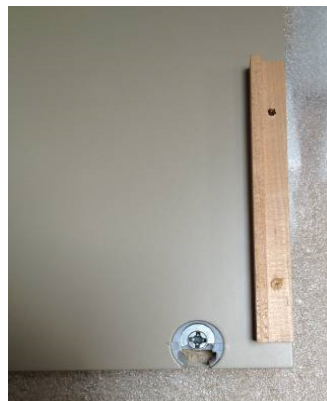

upper shelf

2.



bottom

3.



at the top