

Aufbauanleitung "TAGENA":

Standelemente

VENJAKOB



Das mitgelieferte Befestigungsmaterial (Dübel und Schrauben) ist ausschließlich für die Befestigung von Bauteilen an Beton und/oder festem Mauerwerk geeignet. Bitte beachten Sie auch bei den Wandmontageelementen die max. Belastungswerte. Die Wandbeschaffenheit ist idealerweise bei Auftrags-erfassung zu erfragen und spätestens vor der Montage unbedingt von fachkundigem Personal zu prüfen. Bei abweichender Beschaffenheit (z. B. Leichtbauwänden) ist eine andere, der Belastung angemessene Befestigung bauseits vorzunehmen. Klären Sie elektrische Vorleistungen für Anschluss- und Gerätetechnik. Frei hängende Beleuchtungen erfordern Kabelkanallösungen auf oder unter Putz.

Diese Aufbauanleitung ist gültig für folgende Bestell-Nummern:

Lowboard: 8200, 8201, 8202, 8203, 8204, 8205, 8206, 8207, 8208, 8209, 8210, 8211 | Sideboard: 8221, 8223, 8225, 8227, 8229, 8235, 8237, 8239, 8241, 8243, 8245, 8247, 8249 | Highboard: 8251, 8252, 8253, 8254, 8255, 8256, 8260, 8261, 8262, 8263, 8264, 8265 | Vitrine: 8268, 8269

Bitte sämtliche Aufbauanleitungen sorgfältig lesen und befolgen!

Zum Transport der Möbel empfiehlt es sich aus Gewichtsgründen Frontteile wie Türen und Schubkästen zu demontieren.

Transport und Montage sollten grundsätzlich durch zwei Personen erfolgen!




1. Schritt


Transportschutz & Transportsicherung unterhalb des Möbels entfernen.

Variante A: Stellfüße (Teile-Nr. 05591) in die unteren Eckknoten des Rahmens eindrehen.

Variante B: Möbelgleiter (Teile-Nr. 50611) in den Sockelboden einsetzen.

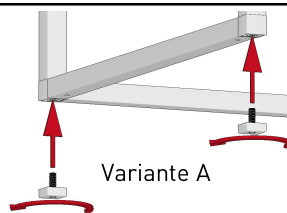


Variante A

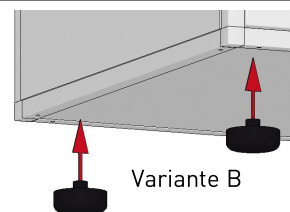

Variante B


2. Schritt

Möbel besteht aus mehreren Collies → siehe zusätzliche Aufbauanleitung "Montage Korpen und Rahmen".

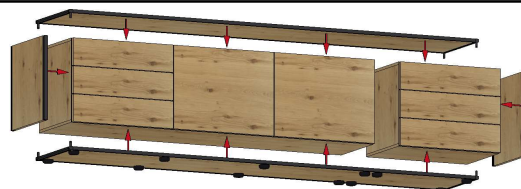

3. Schritt

Zusatzartikel Beleuchtung → siehe zusätzliche Aufbauanleitung "Anschluss Beleuchtung".



4. Schritt


Verstärkungsprofil mit Senkschraube M4x20mm (Teile-Nr. 51245) unter dem Möbel montieren. Dazu Inbusschlüssel SW5 verwenden.



5. Schritt

Bei Möbelbreite ab 124cm ist eine zusätzliche Stabilisierung durch Stützwinkel (Teile-Nr. 50451) an der Wand erforderlich.

Dazu die Position der Type an Wand festlegen, Winkel unter dem Möbel lotrecht zu Mittelseiten / Korpenverbindung positionieren und Bohrposition an Mauerwerk markieren. Dann Bohrung $\varnothing 8\text{mm}$ in Mauerwerk bohren. Dübel 8 x 51mm (Teile Nr. 50802) verankern. Stützwinkel mit 2x Schraube 5x50mm (Teile-Nr. 00055) an Wand befestigen.

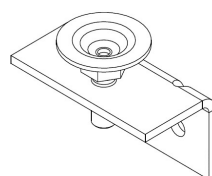

6. Schritt


Stellfüße / Möbelgleiter durch Drehen im Uhrzeigersinn auf den Nullpunkt stellen, Möbel horizontal und vertikal ausrichten. Korrekturen von innen mittels Inbusschlüssel SW4 (Variante B) oder von außen mit Hand vornehmen (Variante A).

Empfehlung:

Zuerst Hinterkante des Möbels über Stützwinkel in Waage ausrichten (1.), dann das Möbel in der Tiefe in Waage stellen (2.) und abschließend die Vorderkante waagerecht ausrichten (3.).

Bei Möbeln mit mittigem Stellfuß ist dieser zwingend zu montieren!

Zusätzlich empfiehlt es sich, diesen bewusst 3mm höher zu stellen, um ein mittiges Durchhängen der Type zu vermeiden.

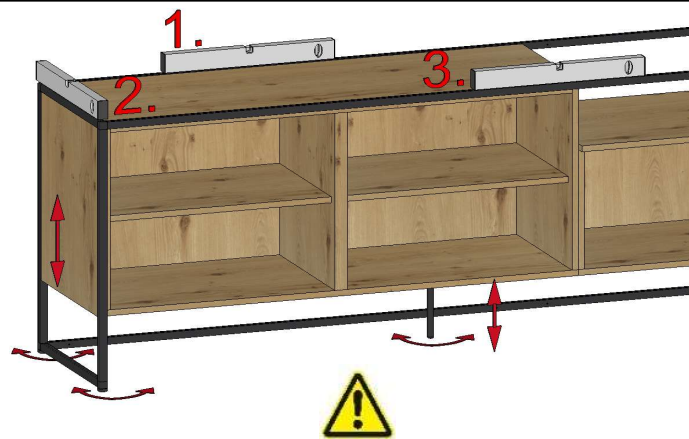

7. Schritt

Montage Kippsicherung bei Möbelhöhe 73cm - 134cm

→ Kippsicherung innenliegend.

Mit Holzbohrer $\varnothing 5\text{mm}$ durch vormontierten Winkel und Rückwand bohren und Bohrposition an Mauerwerk markieren. Dann Bohrung $\varnothing 8\text{mm}$ in Mauerwerk bohren. Dübel 8 x 51mm (Teile Nr. 50802) verankern. Möbel mit Spanplattenschraube 5 x 70 mm (Teile Nr. 00210) an Wand befestigen.



Montage Kippsicherung bei Möbelhöhe 209cm

→ Kippsicherung außenliegend.


Set "Wandbefestigung" (Teile-Nr. 50570) verwenden.



Montage der Kippsicherung Highboards

8251, 8252, 8255, 8260, 8261 und 8264:

Type laut Schritt 5 aufstellen, ausrichten und Position an Zimmerwand markieren. Position der Aussparungen für Winkel aus Set "Wandbefestigung" (Teile-Nr. 50570) von Rückseite der Type auf Zimmerwand übertragen. Winkel an Wand befestigen (1.), Type auf die Winkel aufschieben (2.) und von innen mit Tellerkopfschraube 4x30mm (Teile-Nr. 51266) befestigen (3.).

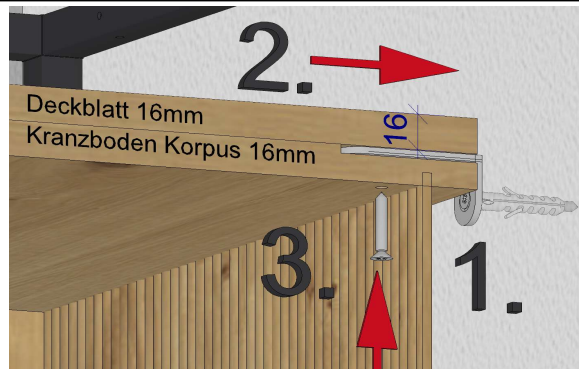

Die Verwendung der Kippsicherung ist zwingend erforderlich!

Sie gewährleistet die Standsicherheit des Möbels und erleichtert die Justierung der Frontelemente!

Bei Nichtverwendung der Kippsicherung gemäß Montageanleitung

droht ein unbeabsichtigtes Umkippen der Möbel!

Lowboards bis Höhe 1,5 Raster haben keine Kippsicherung!




8. Schritt:

Griffe der Alurahmentüren (Teile-Nr. 51106-01-XX) mit Griffschraube M4x23 (Teile-Nr. 51265) montieren.

Frontteile wieder einsetzen.

Bei Fronten mit push-to-open kann die Fuge zwischen Front und Korpus über Drehen des Auswerfers eingestellt werden.

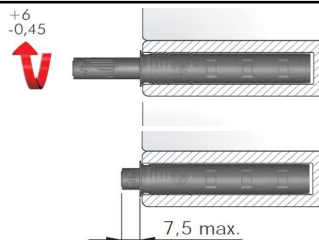

9. Schritt:

Zierkappen (Teile-Nr. 50619) auf Türscharniere klipsen. Bohrungen im Aluminiumrahmen mit Abdeckkappe 52911-01-XX schließen. Bei Verwendung von Möbelgleitern (Teile-Nr. 50611): Löcher im Sockelboden von innen mit Abdeckkappe (Teile-Nr. 50422-01-75) verschließen.

Assembly instructions "TAGENA":

Stand elements

VENJAKOB



The fixture materials provided with this product (dowels and screws) are only suitable for fixing parts to concrete and/or solid masonry. Please observe the maximum load that the wall-mounted elements can carry. Ideally, the suitability of the wall should be enquired about when the order is made and must be checked by specialist staff before the cabinet is assembled at the latest. If the condition of the wall is not suitable (e.g. if it is a lightweight partition wall), then another type of fixture suitable for the load that is to be carried should be used. Check the electrical input of any connection or device technology. Free-hanging light fixtures require cable duct solutions that are either on or under plaster.


These assembly instructions are valid for the following order no.:

Lowboard: 8200, 8201, 8202, 8203, 8204, 8205, 8206, 8207, 8208, 8209, 8210, 8211 | **Sideboard:** 8221, 8223, 8225, 8227, 8229, 8235, 8237, 8239, 8241, 8243, 8245, 8247, 8249 | **Highboard:** 8251, 8252, 8253, 8254, 8255, 8256, 8260, 8261, 8262, 8263, 8264, 8265 | **Cabinet:** 8268, 8269

Please read and follow all assembly instructions carefully.

For reasons of weight, it is advisable to dismantle front parts such as doors and drawers when transporting the furniture.

Transportation and assembly should always be carried out by two people!

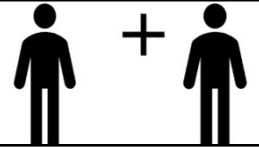


Step 1


Remove the transport protection & the transport lock underneath the furniture.

Variant A: Screw adjustable feet (part no. 05591) into the lower corner nodes of the frame.

Variant B: Insert furniture glides (part no. 50611) into the base bottom.

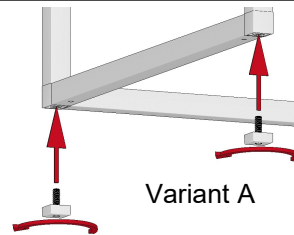

Variant A

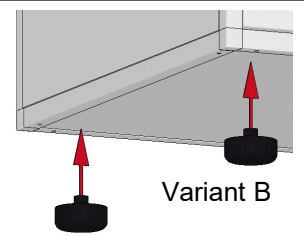

Variant B


Step 2

Furniture consists of several packages → see additional assembly instructions "Body and frame assembly".



Step 3

Additional article: lighting → see additional assembly instructions "Connecting the lighting".




Step 4

Mount the reinforcement profile under the furniture using the countersunk screw M4x20mm (part no. 51245). Use an Allen key SW5 to do so.



Step 5

For furniture width from 124cm up to 243cm a additional stabilization by means of support brackets (part no. 50451) on the wall is required. For this purpose, determine the position of the type on the wall, position the bracket under the furniture perpendicular to the centre panels / body connection and mark the drilling position on the masonry. Then drill the $\varnothing$ 8 mm hole in the masonry. Anchor the dowels 8 x 51 mm (part no. 50802). Fasten the support bracket on the wall using 2 screws 5 x 50 mm (part no. 00055).

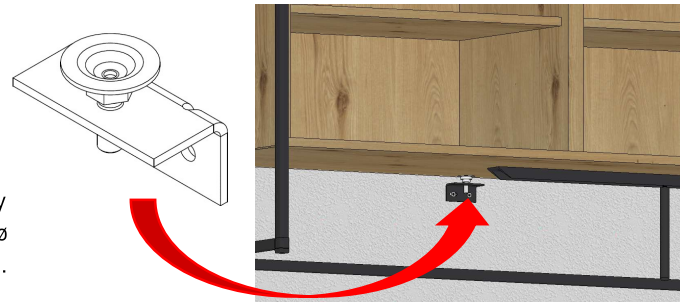


Step 6

Adjust the adjustable feet / furniture glides to the zero point by turning them clockwise, align the furniture horizontally and vertically. Make corrections from the inside using an Allen wrench SW4 (variant B) or from the outside by hand (variant A).

Recommendation:

First of all, level the rear edge of the furniture using the support bracket (1.), then level the depth of the furniture (2.) and finally level the front edge (3.).

For furniture with a central adjustable foot, this foot must imperatively be installed! It is also advisable to deliberately set it 3 mm higher to prevent the type from sagging in the middle.

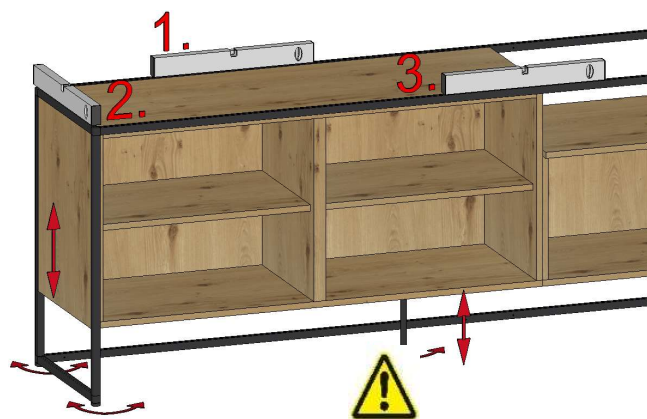

Step 7

Mounting the tilt protection for furniture height 73 cm - 134 cm

→ Tilt protection on the inside.


Drill a $\varnothing$ 5 mm hole through the preassembled bracket and the rear wall using a wood drill and mark the drilling position on the masonry. Then drill the $\varnothing$ 8 mm hole in the masonry. Anchor the dowels 8 x 51 mm (part no. 50802). Use a chipboard screw 5 x 70 mm (part no. 00210) to secure the furniture on the wall.



Mounting the tilt protection for furniture height 209 cm

→ Tilt protection on the outside.


Use the "Wall mounting" set (part no. 50570).

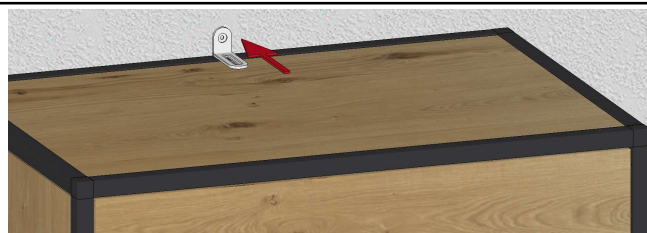

Mounting the tilt protection for highboards

8251, 8252, 8255, 8260, 8261 and 8264:

Set up the type according to step 5, align and mark the position on the room wall. Transfer the position of the recesses for the brackets from the "Wall mounting" set (part no. 50570) from the rear of the type to the room wall. Attach the bracket to the wall (1.), push the type onto the bracket (2.) and secure from the inside with the pan head screw 4 x 30 mm (part no. 51266) (3.).

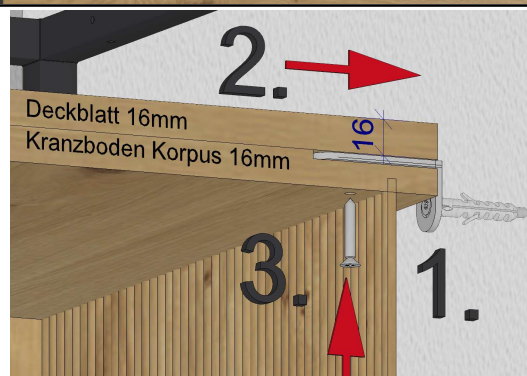

Use of the tilt protection is absolutely necessary!

It ensures the stability of the furniture and facilitates the adjustment of the front elements!

Failure to use the anti-tip device in accordance with the assembly instructions may result in the furniture inadvertently tipping over!

Lowboards up to a height of 1.5 grids have no tilt protection!




Step 8:

Fit the handles of the aluminium frame doors (part no. 51106-01-XX) using the handle screw M4x23 (part no. 51265).

Reinstall the front panels.

In case of front panels with push-to-open functionality, the gap between front and body can be adjusted by rotating the ejector.

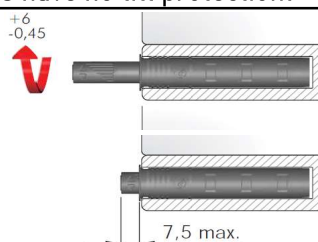

Step 9:

Clip the decorative caps (part no. 50619) onto the door hinges. Close the holes in the aluminium frame with cap 52911-01-XX. When using furniture glides (part no. 50611): Close the holes in the base bottom from the inside by means of cover caps (part no. 50422-01-75).